

# Table of Contents

<b>BS2_RemoveAllDeviceZoneAGEntranceLimit</b> .....	1
Declaration .....	1
Parameter .....	1
Return Value .....	1
See Also .....	1

[Zone Control API](#) > [BS2\\_RemoveAllDeviceZoneAGEntranceLimit](#)

---

## BS2\_RemoveAllDeviceZoneAGEntranceLimit

Removes all Ethernet access group entrance limit

### Declaration

```
#include "BS_API.h"

int BS2_RemoveAllDeviceZoneAGEntranceLimit(void* context, BS2_DEVICE_ID
deviceId);
```

### Parameter

- [In] *context* : Context
- [In] *deviceId* : Device ID

### Return Value

If successfully done, BS\_SDK\_SUCCESS will be returned.  
If there is an error, the corresponding error code will be returned.

### See Also

[BS2\\_GetDeviceZoneAGEntranceLimit](#)  
[BS2\\_GetAllDeviceZoneAGEntranceLimit](#)  
[BS2\\_SetDeviceZoneAGEntranceLimit](#)  
[BS2\\_RemoveDeviceZoneAGEntranceLimit](#)

From:  
<https://kb.supremainc.com/kbtest/> - **BioStar Device SDK**

Permanent link:  
[https://kb.supremainc.com/kbtest/doku.php?id=en:bs2\\_removealldevicezoneagentrancelimit&rev=1504685439](https://kb.supremainc.com/kbtest/doku.php?id=en:bs2_removealldevicezoneagentrancelimit&rev=1504685439)

Last update: **2017/09/06 17:10**