

Table of Contents

BS2_RemoveAllIntrusionAlarmZone	1
Declaration	1
Parameter	1
Return Value	1
See Also	1

[Zone Control API](#) > [BS2_RemoveAllScheduledLockUnlockZone](#)

BS2_RemoveAllIntrusionAlarmZone

Removes all Intrusion Alarm zones.

Declaration

```
#include "BS_API.h"

int BS2_RemoveAllIntrusionAlarmZone(void* context, uint32_t deviceId);
```

Parameter

- [In] *context* : Context
- [In] *deviceId* : Device ID

Return Value

If successfully done, BS_SDK_SUCCESS will be returned.
If there is an error, the corresponding error code will be returned.

See Also

[BS2_GetIntrusionAlarmZone](#)
[BS2_GetIntrusionAlarmZoneStatus](#)
[BS2_GetAllIntrusionAlarmZoneStatus](#)
[BS2_SetIntrusionAlarmZone](#)
[BS2_SetIntrusionAlarmZoneAlarm](#)
[BS2_RemoveIntrusionAlarmZone](#)
[BS2_SetIntrusionAlarmZoneArm](#)

From:
<https://kb.supremainc.com/kbtest/> - **BioStar Device SDK**

Permanent link:
https://kb.supremainc.com/kbtest/doku.php?id=en:bs2_removeallintrusionalarmzone

Last update: **2017/09/05 14:33**