

Table of Contents

BS2_RemoveDeviceZone	1
Supported devices	1
Declaration	1
Parameter	1
Return Value	1
See Also	1

[Zone Control API](#) > [BS2_RemoveDeviceZone](#)

BS2_RemoveDeviceZone

Removes selected Ethernet zones.

Supported devices

BioStation 2 (1.5.0 only)
BioStatioin A2 (1.4.0 only)
BioEntry P2 (1.0.0 only)

Declaration

```
#include "BS_API.h"

int BS2_RemoveDeviceZone(void* context, BS2_DEVICE_ID deviceId, const
BS2_DEVICE_ZONE_TABLE_ID* Ids, uint32_t IdCount);
```

Parameter

- [In] *context* : Context
- [In] *deviceId* : Device ID
- [In] *Ids* : List of Device zone IDs to remove
- [In] *IdCount* : Number of Device zones to remove

Return Value

If successfully done, BS_SDK_SUCCESS will be returned.
If there is an error, the corresponding error code will be returned.

See Also

[BS2_GetDeviceZone](#)
[BS2_GetAllDeviceZone](#)
[BS2_SetDeviceZone](#)
[BS2_RemoveAllDeviceZone](#)
[BS2_SetDeviceZoneAlarm](#)

From:

<http://kb.supremainc.com/bs2sdk/> - **BioStar 2 Device SDK**

Permanent link:

http://kb.supremainc.com/bs2sdk/doku.php?id=en:bs2_removedevicezone

Last update: **2018/03/22 10:58**