

Table of Contents

BS2_RemoveDeviceZoneAGEntranceLimit

Supported devices

Declaration

Parameter

Return Value

See Also

1

1

1

1

1

1

[Zone Control API](#) > [BS2_RemoveDeviceZoneAGEntranceLimit](#)

BS2_RemoveDeviceZoneAGEntranceLimit

Removes selected Ethernet access group entrance limit.

Supported devices

BioStation 2 (1.5.0 only)

BioStation A2 (1.4.0 only)

BioEntry P2 (1.0.0 only)

Declaration

```
#include "BS_API.h"

int BS2_RemoveDeviceZoneAGEntranceLimit(void* context, BS2_DEVICE_ID
deviceId, const BS2_ZONE_ID* Ids, uint32_t IdCount);
```

Parameter

- [In] *context* : Context
- [In] *deviceId* : Device ID
- [In] *Ids* : List of Device zone IDs to remove
- [In] *IdCount* : Number of Device zones to remove

Return Value

If successfully done, BS_SDK_SUCCESS will be returned.

If there is an error, the corresponding error code will be returned.

See Also

[BS2_GetDeviceZoneAGEntranceLimit](#)

[BS2_GetAllDeviceZoneAGEntranceLimit](#)

[BS2_SetDeviceZoneAGEntranceLimit](#)

[BS2_RemoveAllDeviceZoneAGEntranceLimit](#)

From:

<https://kb.supremainc.com/kbtest/> - **BioStar Device SDK**

Permanent link:

https://kb.supremainc.com/kbtest/doku.php?id=en:bs2_removedevicezoneagentrancelimit

Last update: **2018/03/22 10:56**