

Table of Contents

BS2_SetDeviceZoneAGEntranceLimit	1
Supported devices	1
Declaration	1
Parameter	1
Return Value	1
See Also	1

[Zone Control API](#) > [BS2_SetDeviceZoneAGEntranceLimit](#)

BS2_SetDeviceZoneAGEntranceLimit

Configures Ethernet access group entrance limit.

Supported devices

BioStation 2 (1.5.0 only)
BioStatioin A2 (1.4.0 only)
BioEntry P2 (1.0.0 only)

Declaration

```
#include "BS_API.h"

int BS2_SetDeviceZoneAGEntranceLimit(void* context, BS2_DEVICE_ID deviceId,
const BS2DeviceZoneAGEntranceLimit* deviceZoneAGEntranceLimits, uint32_t
deviceZoneAGEntranceLimitCount);
```

[See BS2DeviceZoneAGEntranceLimit Structure](#)

Parameter

- [In] *context* : Context
- [In] *deviceId* : Device ID
- [In] *deviceZoneAGEntranceLimits* : Device zone access group entrance limit list
- [In] *deviceZoneAGEntranceLimitCount* : Number of device zone access group

Return Value

If successfully done, BS_SDK_SUCCESS will be returned.
If there is an error, the corresponding error code will be returned.

See Also

[BS2_GetDeviceZoneAGEntranceLimit](#)
[BS2_GetAllDeviceZoneAGEntranceLimit](#)
[BS2_RemoveDeviceZoneAGEntranceLimit](#)

[BS2_RemoveAllDeviceZoneAGEntranceLimit](#)

From:

<https://kb.supremainc.com/kbtest/> - **BioStar Device SDK**

Permanent link:

https://kb.supremainc.com/kbtest/doku.php?id=en:bs2_setdevicezoneagentrancelimit&rev=1521683808

Last update: **2018/03/22 10:56**