

# Table of Contents

<b>BS2_SetDeviceZoneAGEntranceLimit</b> .....	1
Supported devices .....	1
Declaration .....	1
Parameter .....	1
Return Value .....	1
See Also .....	2

## BS2\_SetDeviceZoneAGEntranceLimit

Configures Ethernet access group entrance limit.

### Supported devices

BioStation 2 (1.5.0 only)  
BioStation A2 (1.4.0 only)  
BioEntry P2 (1.0.0 only)  
BioEntry W2 (1.2.0 only)  
BioStation L2 (1.3.0 only)  
FaceLite (1.0.0 or higher version)  
FaceStation 2 (1.0.0 or higher version)  
BioLite N2(1.0.0 or higher version)  
X-Station 2(1.0.0 or higher version)  
FaceStation F2(1.0.0 or higher version)  
CoreStation(1.0.0 or higher version)  
XPass 2(1.0.0 or higher version)

### Declaration

```
#include "BS_API.h"

int BS2_SetDeviceZoneAGEntranceLimit(void* context, BS2_DEVICE_ID deviceId,
const BS2DeviceZoneAGEntranceLimit* deviceZoneAGEntranceLimits, uint32_t
deviceZoneAGEntranceLimitCount);
```

[See BS2DeviceZoneAGEntranceLimit Structure](#)

### Parameter

- [In] *context* : Context
- [In] *deviceId* : Device ID
- [In] *deviceZoneAGEntranceLimits* : Device zone access group entrance limit list
- [In] *deviceZoneAGEntranceLimitCount* : Number of device zone access group

### Return Value

If successfully done, BS\_SDK\_SUCCESS will be returned.  
If there is an error, the corresponding error code will be returned.

## See Also

[BS2\\_GetDeviceZoneAGEntranceLimit](#)  
[BS2\\_GetAllDeviceZoneAGEntranceLimit](#)  
[BS2\\_RemoveDeviceZoneAGEntranceLimit](#)  
[BS2\\_RemoveAllDeviceZoneAGEntranceLimit](#)

From:  
<https://kb.supremainc.com/kbtest/> - **BioStar Device SDK**

Permanent link:  
[https://kb.supremainc.com/kbtest/doku.php?id=en:bs2\\_setdevicezoneagentrancelimit&rev=1658985563](https://kb.supremainc.com/kbtest/doku.php?id=en:bs2_setdevicezoneagentrancelimit&rev=1658985563)

Last update: **2022/07/28 14:19**