

# Table of Contents

<b>BS2_SetDeviceZoneMasterConfig</b> .....	1
Supported devices .....	1
Declaration .....	1
Parameter .....	1
Return Value .....	1
See Also .....	1

[Zone Control API](#) > [BS2\\_SetDeviceZoneMasterConfig](#)

---

## BS2\_SetDeviceZoneMasterConfig

Configures the zone master config of the Ethernet zone.

### Supported devices

BioStation 2 (1.5.0 only)  
BioStatioin A2 (1.4.0 only)  
BioEntry P2 (1.0.0 only)

### Declaration

```
#include "BS_API.h"

int BS2_SetDeviceZoneMasterConfig(void* context, BS2_DEVICE_ID deviceId,
const BS2DeviceZoneMasterConfig* config);
```

[See BS2DeviceZoneMasterConfig Structure](#)

### Parameter

- [In] *context* : Context
- [In] *deviceId* : Device ID
- [In] *config* : Zone master config pointer

### Return Value

If successfully done, BS\_SDK\_SUCCESS will be returned.  
If there is an error, the corresponding error code will be returned.

### See Also

[BS2\\_GetDeviceZoneMasterConfig](#)  
[BS2\\_RemoveDeviceZoneMasterConfig](#)

From:

<http://kb.supremainc.com/bs2sdk/> - **BioStar 2 Device SDK**

Permanent link:

[http://kb.supremainc.com/bs2sdk/doku.php?id=en:bs2\\_setdevicezonemasterconfig](http://kb.supremainc.com/bs2sdk/doku.php?id=en:bs2_setdevicezonemasterconfig)

Last update: **2021/01/06 15:09**