

Table of Contents

| | |
|--|---|
| BS2_SetFacilityCodeConfig | 1 |
| Declaration | 1 |
| Parameter | 1 |
| Return Value | 1 |
| See Also | 1 |

[Configuration API](#) > [BS2_SetFacilityCodeConfig](#)

BS2_SetFacilityCodeConfig

[+ 2.9.9] Sets the BS2FacilityCode used as an authentication code when the OSDP connection between the Door Interface (DI-24) and the master device is lost.

Declaration

```
#include "BS_API.h"

int BS2_SetFacilityCodeConfig(void* context, BS2_DEVICE_ID deviceId,
BS2FacilityCodeConfig* config);
```

[See BS2FacilityCodeConfig Structure](#)

Parameter

- [In] *context* : Context
- [In] *deviceId* : Device Identifier
- [Out] *config* : Pointer to store credentials BS2FacilityCodeConfig

Return Value

If successfully done, BS_SDK_SUCCESS will be returned. If there is an error, the corresponding error code will be returned.

See Also

[BS2_GetFacilityCodeConfig](#)

From:
<https://kb.supremainc.com/kbtest/> - **BioStar Device SDK**

Permanent link:
https://kb.supremainc.com/kbtest/doku.php?id=en:bs2_setfacilitycodeconfig

Last update: **2025/06/12 08:08**