

# Table of Contents

<b>BS2_SetIntrusionAlarmZone</b> .....	1
Declaration .....	1
Parameter .....	1
Return Value .....	1
See Also .....	1

[Zone Control API](#) > [BS2\\_SetIntrusionAlarmZone](#)

---

## BS2\_SetIntrusionAlarmZone

Configures an Intrusion Alarm zone.

### Declaration

```
#include "BS_API.h"

int BS2_SetIntrusionAlarmZone(void* context, uint32_t deviceId,
BS2IntrusionAlarmZoneBlob* zones, uint32_t zoneCount);
```

[See BS2IntrusionAlarmZoneBlob Structure](#)

### Parameter

- [In] *context* : Context
- [In] *deviceId* : Device ID
- [In] *zones* : Intrusion alarm zone list
- [In] *zoneCount* : Number of intrusion alarm zone list

### Return Value

If successfully done, BS\_SDK\_SUCCESS will be returned.  
If there is an error, the corresponding error code will be returned.

### See Also

[BS2\\_GetIntrusionAlarmZone](#)  
[BS2\\_GetIntrusionAlarmZoneStatus](#)  
[BS2\\_GetAllIntrusionAlarmZoneStatus](#)  
[BS2\\_SetIntrusionAlarmZoneAlarm](#)  
[BS2\\_RemoveIntrusionAlarmZone](#)  
[BS2\\_RemoveAllIntrusionAlarmZone](#)  
[BS2\\_SetIntrusionAlarmZoneArm](#)

From:

<https://kb.supremainc.com/kbtest/> - **BioStar Device SDK**

Permanent link:

[https://kb.supremainc.com/kbtest/doku.php?id=en:bs2\\_setintrusionalarmzone](https://kb.supremainc.com/kbtest/doku.php?id=en:bs2_setintrusionalarmzone)

Last update: **2017/09/05 14:07**