

Table of Contents

BS2_SetIntrusionAlarmZoneAlarm	1
Declaration	1
Parameter	1
Return Value	1
See Also	1

[Zone Control API](#) > [BS2_SetIntrusionAlarmZoneAlarm](#)

BS2_SetIntrusionAlarmZoneAlarm

Updates Intrusion alarm zone alarm status.

Declaration

```
#include "BS_API.h"

int BS2_SetIntrusionAlarmZoneAlarm(void* context, uint32_t deviceId, uint8_t
alarmed, uint32_t* zoneIds, uint32_t zoneIdCount);
```

Parameter

- [In] *context* : Context
- [In] *deviceId* : Device ID
- [In] *alarmed* : Whether the alarm has been triggered or not
- [In] *zoneIds* : Intrusion alarm zone id list
- [In] *zoneIdCount* : Number intrusion alarm zone id list

Return Value

If successfully done, BS_SDK_SUCCESS will be returned.

If there is an error, the corresponding error code will be returned.

See Also

[BS2_GetIntrusionAlarmZone](#)
[BS2_GetIntrusionAlarmZoneStatus](#)
[BS2_GetAllIntrusionAlarmZoneStatus](#)
[BS2_SetIntrusionAlarmZone](#)
[BS2_RemoveIntrusionAlarmZone](#)
[BS2_RemoveAllIntrusionAlarmZone](#)
[BS2_SetIntrusionAlarmZoneArm](#)

From:
<https://kb.supremainc.com/kbtest/> - **BioStar Device SDK**

Permanent link:
https://kb.supremainc.com/kbtest/doku.php?id=en:bs2_setintrusionalarmzonealarm

Last update: **2017/09/05 14:29**

