

Table of Contents

BS2_SetLiftLockUnlockZone	1
Declaration	1
Parameter	1
Return Value	1
See Also	1

[Zone Control API](#) > [BS2_SetLiftLockUnlockZone](#)

BS2_SetLiftLockUnlockZone

[+ 2.7.0] Configures a Lift Lock/Unlock zone.

Declaration

```
#include "BS_API.h"

int BS2_SetLiftLockUnlockZone(void* context, uint32_t deviceId,
BS2LiftLockUnlockZone* zones, uint32_t zoneCount);
```

[See BS2LiftLockUnlockZone Structure](#)

Parameter

- [In] *context* : Context
- [In] *deviceId* : Device ID
- [In] *zones* : Lift lock/unlock zone list
- [In] *zoneCount* : Number of Lift lock/unlock zone list

Return Value

If successfully done, BS_SDK_SUCCESS will be returned.
If there is an error, the corresponding error code will be returned.

See Also

[BS2_GetLiftLockUnlockZone](#)
[BS2_GetAllLiftLockUnlockZone](#)
[BS2_GetLiftLockUnlockZoneStatus](#)
[BS2_GetAllLiftLockUnlockZoneStatus](#)
[BS2_SetLiftLockUnlockZoneAlarm](#)
[BS2_RemoveLiftLockUnlockZone](#)
[BS2_RemoveAllLiftLockUnlockZone](#)

From:

<https://kb.supremainc.com/kbtest/> - **BioStar Device SDK**

Permanent link:

https://kb.supremainc.com/kbtest/doku.php?id=en:bs2_setliftlockunlockzone

Last update: **2020/07/29 11:28**