

BS2_ActivateFloor

.....

.....

.....

.....

.....

.....

1

1

1

1

1

[Lift Control API](#) > [BS2_ActivateFloor](#)

BS2_ActivateFloor

Floor가 , Floor가 .

```
#include "BS_API.h"
```

```
int BS2_ActivateFloor(void* context, uint32_t deviceId, BS2_FLOOR_FLAG flag,  
BS2_LIFT_ID liftID, uint16_t* floorIndexs, uint8_t floorIndexCount);
```

- [In] *context* : Context
- [In] *deviceId* :
- [In] *flag* : 가 floor
- [In] *liftID* : lift ID
- [In] *floorIndexs* : floor Index
- [In] *floorIndexCount* : floor Index

BS_SDK_SUCCESS , 가

[BS2_GetLift](#)
[BS2_GetAllLift](#)
[BS2_GetLiftStatus](#)
[BS2_GetAllLiftStatus](#)
[BS2_SetLift](#)
[BS2_SetLiftAlarm](#)
[BS2_RemoveLift](#)
[BS2_RemoveAllLift](#)
[BS2_ReleaseFloor](#)
[BS2_DeActivateFloor](#)

From:

<https://kb.supremainc.com/kbtest/> - **BioStar Device SDK**

Permanent link:

https://kb.supremainc.com/kbtest/doku.php?id=ko:bs2_activatefloor

Last update: **2017/06/28 11:41**