

BS2_AllocateUsbContext 1
..... 1
..... 1
..... 1
..... 1

BS2_AllocateUsbContext

USB Context . USB Context USB
export .

```
#include "BS_API.h"
void* BS2_AllocateUsbContext(const char* szDir);
```

- [In] *szDir* : USB



가 NULL , USB Context .

- [BS2_ReleaseUsbContext](#)
- [BS2_GetUserDatabaseInfoFromDir](#)
- [BS2_GetUserListFromDir](#)
- [BS2_GetUserInfosFromDir](#)
- [BS2_GetUserDatasFromDir](#)
- [BS2_GetUserInfosExFromDir](#)
- [BS2_GetUserDatasExFromDir](#)
- [BS2_GetLogFromDir](#)
- [BS2_GetLogBlobFromDir](#)
- [BS2_GetFilteredLogFromDir](#)

From:

<https://kb.supremainc.com/kbtest/> - **BioStar Device SDK**

Permanent link:

https://kb.supremainc.com/kbtest/doku.php?id=ko:bs2_allocateusbcontext&rev=1540863205

Last update: **2018/10/30 10:33**