

BS2_AllocateUsbContext	1
.....	1
.....	1
.....	1
.....	1
.....	1

BS2_AllocateUsbContext

USB

Context


. USB Context

USB

```
#include "BS_API.h"

void* BS2_AllocateUsbContext(const char* szDir);
```

- [In] *szDir* : USB

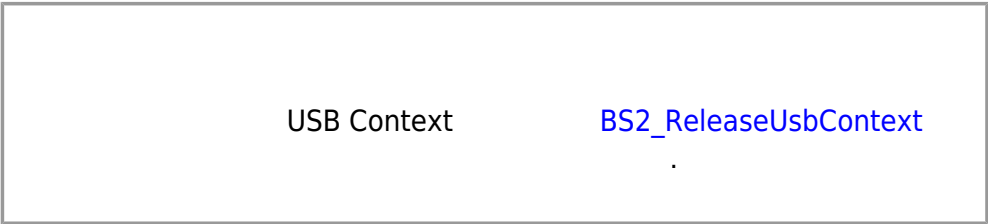

가

NULL

,

USB Context

.

- BS2_ReleaseUsbContext
- BS2_GetUserDatabaseInfoFromDir
- BS2_GetUserListFromDir
- BS2_GetUserInfosFromDir
- BS2_GetUserDatasFromDir
- BS2_GetUserInfosExFromDir
- BS2_GetUserDatasExFromDir
- BS2_GetLogFromDir
- BS2_GetLogBlobFromDir
- BS2_GetFilteredLogFromDir

From:

<https://kb.supremainc.com/kbtest/> - **BioStar Device SDK**

Permanent link:

https://kb.supremainc.com/kbtest/doku.php?id=ko:bs2_allocateusbcontext&rev=1540863247

Last update: **2018/10/30 10:34**