

BS2_GetAllDeviceZone 1
..... 1
..... 1
..... 1
..... 1

BS2_GetAllDeviceZone

Ethernet 가 .

```
#include "BS_API.h"

int BS2_GetAllDeviceZone(void* context, BS2_DEVICE_ID deviceId,
BS2DeviceZone** deviceZoneObj, uint32_t* numDeviceZone);
```

[BS2DeviceZone](#)

- [In] *context* : Context
- [In] *deviceId* :
- [Out] *deviceZoneObj* : device zone
- [Out] *numDeviceZone* : device zone



BS_SDK_SUCCESS , 가

- [BS2_GetDeviceZone](#)
- [BS2_SetDeviceZone](#)
- [BS2_RemoveDeviceZone](#)
- [BS2_RemoveAllDeviceZone](#)

From:

<https://kb.supremainc.com/kbtest/> - **BioStar Device SDK**

Permanent link:

https://kb.supremainc.com/kbtest/doku.php?id=ko:bs2_getalldevicezone&rev=1504530468

Last update: **2017/09/04 22:07**