

BS2_GetAllDeviceZoneAGEntranceLimit	1
.....	1
.....	1
.....	1
.....	1
.....	2

BS2_GetAllDeviceZoneAGEntranceLimit

Ethernet Access Group 가 .

BioStation 2 (1.5.0 only)
BioStation A2 (1.4.0 only)
BioEntry P2 (1.0.0 only)

```
#include "BS_API.h"

int BS2_GetAllDeviceZoneAGEntranceLimit(vvoid* context, BS2_DEVICE_ID
deviceId, BS2DeviceZoneAGEntranceLimit** deviceZoneAGEntranceLimitObj,
uint32 t* numDeviceZoneAGEntranceLimit);
```

BS2DeviceZoneAGEntranceLimit

- [In] *context* : Context
- [In] *deviceId* :
- [Out] *deviceZoneAGEntranceLimitObj* : device zone Access Group
- [Out] *numDeviceZoneAGEntranceLimit* : device zone Access Group

zoneObj BS2 ReleaseObject

BS SDK SUCCESS , 가

[BS2_GetDeviceZoneAGEntranceLimit](#)
[BS2_SetDeviceZoneAGEntranceLimit](#)
[BS2_RemoveDeviceZoneAGEntranceLimit](#)
[BS2_RemoveAllDeviceZoneAGEntranceLimit](#)

From:

<https://kb.supremainc.com/kbtest/> - **BioStar Device SDK**

Permanent link:

https://kb.supremainc.com/kbtest/doku.php?id=ko:bs2_getalldevicezoneagentrancelimit

Last update: **2018/03/22 10:52**