

BS2_GetAllDeviceZoneAGEntranceLimit 1
..... 1
..... 1
..... 1
..... 1

BS2_GetAllDeviceZoneAGEntranceLimit

Ethernet Access Group 가 .

```
#include "BS_API.h"

int BS2_GetAllDeviceZoneAGEntranceLimit(vvoid* context, BS2_DEVICE_ID
deviceId, BS2DeviceZoneAGEntranceLimit** deviceZoneAGEntranceLimitObj,
uint32_t* numDeviceZoneAGEntranceLimit);
```

[BS2DeviceZoneAGEntranceLimit](#)

- [In] *context* : Context
- [In] *deviceId* :
- [Out] *deviceZoneAGEntranceLimitObj* : device zone Access Group
- [Out] *numDeviceZoneAGEntranceLimit* : device zone Access Group

zoneObj	BS2_ReleaseObject
---------	-----------------------------------

BS_SDK_SUCCESS , 가

- [BS2_GetDeviceZoneAGEntranceLimit](#)
- [BS2_SetDeviceZoneAGEntranceLimit](#)
- [BS2_RemoveDeviceZoneAGEntranceLimit](#)

BS2_RemoveAllDeviceZoneAGEntranceLimit

From:

<https://kb.supremainc.com/kbtest/> - **BioStar Device SDK**

Permanent link:

https://kb.supremainc.com/kbtest/doku.php?id=ko:bs2_getalldevicezoneagentrancelimit&rev=1504568993

Last update: **2017/09/05 08:49**