

BS2_GetDeviceZoneAGEntranceLimit

.....

.....

.....

.....

.....

.....

.....

1

1

1

1

1

2

BS2_GetDeviceZoneAGEntranceLimit

Ethernet Access Group 가 .

BioStation 2 (1.5.0 only)
BioStation A2 (1.4.0 only)
BioEntry P2 (1.0.0 only)

```
#include "BS_API.h"
```

```
int BS2_GetDeviceZoneAGEntranceLimit:(void* context, BS2_DEVICE_ID deviceId,
const BS2_ZONE_ID* Ids, uint32_t IdCount, BS2DeviceZoneAGEntranceLimit**
deviceZoneAGEntranceLimitObj, uint32_t* numDeviceZoneAGEntranceLimit);
```

BS2DeviceZoneAGEntranceLimit

- [In] *context* : Context
- [In] *deviceId* :
- [In] *Ids* : 가 device zone id
- [In] *IdCount* : device zone id
- [Out] *deviceZoneAGEntranceLimitObj* : device zone Access Group
- [Out] *numDeviceZoneAGEntranceLimit* : device zone Access Group

zoneObj BS2 ReleaseObject

BS_SDK_SUCCESS

, 가

BS2_GetAllDeviceZoneAGEntranceLimit
BS2_SetDeviceZoneAGEntranceLimit
BS2_RemoveDeviceZoneAGEntranceLimit
BS2_RemoveAllDeviceZoneAGEntranceLimit

From:

<https://kb.supremainc.com/kbtest/> - **BioStar Device SDK**

Permanent link:

https://kb.supremainc.com/kbtest/doku.php?id=ko:bs2_getdevicezoneagentrancelimitLast update: **2018/11/14 08:46**