

BS2_GetLiftStatus 1
..... 1
..... 1
..... 1
..... 1

BS2_GetLiftStatus

Lift 가 .

```
#include "BS_API.h"

int BS2_GetLiftStatus(void* context, BS2_DEVICE_ID deviceId, BS2_LIFT_ID* liftIds, uint32_t liftIdCount, BS2LiftStatus** liftStatusObj, uint32_t* numLiftStatus);
```

[BS2LiftStatus](#)

- [In] *context* : Context
- [In] *deviceId* :
- [In] *liftIds* : 가 lift id
- [In] *liftIdCount* : lift id
- [Out] *liftStatusObj* : lift status
- [Out] *numLiftStatus* : lift status

liftStatusObj [BS2_ReleaseObject](#)

.

BS_SDK_SUCCESS , 가

[BS2_GetLift](#)
[BS2_GetAllLift](#)

BS2_GetAllLiftStatus
BS2_SetLift
BS2_SetLiftAlarm
BS2_RemoveLift
BS2_RemoveAllLift
BS2_ReleaseFloor
BS2_ActivateFloor
BS2_DeActivateFloor

From:

<https://kb.supremainc.com/kbtest/> - **BioStar Device SDK**

Permanent link:

https://kb.supremainc.com/kbtest/doku.php?id=ko:bs2_getliftstatus

Last update: **2017/06/28 11:47**