

**BS2\_GetRS485ConfigExDynamic** ..... 1

..... 1

..... 1

..... 1

..... 1

[Configuration API > BS2\\_GetRS485ConfigExDynamic](#)

## BS2\_GetRS485ConfigExDynamic

[+ 2.9.9] CoreStation RS485 가 .

```
#include "BS_API.h"

int BS2_GetRS485ConfigExDynamic(void* context, uint32_t deviceId,
BS2Rs485ConfigEXDynamic* config);
```

 
: CoreStation 20(CS-20, CS-20P), Door Interface(DI-24)

[BS2Rs485ConfigEXDynamic](#)

- [In] *context* : Context
- [In] *deviceId* :
- [Out] *config* : RS485

BS\_SDK\_SUCCESS , 가

[BS2\\_SetRS485ConfigExDynamic](#)



From:

<https://kb.supremainc.com/kbtest/> - **BioStar Device SDK**

Permanent link:

[https://kb.supremainc.com/kbtest/doku.php?id=ko:bs2\\_getrs485configexdynamic](https://kb.supremainc.com/kbtest/doku.php?id=ko:bs2_getrs485configexdynamic)

Last update: **2025/06/11 15:03**