

|                                            |   |
|--------------------------------------------|---|
| <b>BS2_RemoveDeviceZoneAGEntranceLimit</b> | 1 |
| .....                                      | 1 |
| .....                                      | 1 |
| .....                                      | 1 |
| .....                                      | 1 |
| .....                                      | 1 |
| .....                                      | 1 |

# BS2\_RemoveDeviceZoneAGEntranceLimit

Ethernet Access Group .

BioStation 2 (1.5.0 only)  
BioStation A2 (1.4.0 only)  
BioEntry P2 (1.0.0 only)

 
```
#include "BS_API.h"

int BS2_RemoveDeviceZoneAGEntranceLimit(void* context, BS2_DEVICE_ID
deviceId, const BS2_ZONE_ID* Ids, uint32_t IdCount);
```

- [In] *context* : Context
- [In] *deviceId* :
- [In] *Ids* : device zone id
- [In] *IdCount* : device zone id

BS\_SDK\_SUCCESS , 가

- [BS2\\_GetDeviceZoneAGEntranceLimit](#)
- [BS2\\_GetAllDeviceZoneAGEntranceLimit](#)
- [BS2\\_SetDeviceZoneAGEntranceLimit](#)
- [BS2\\_RemoveAllDeviceZoneAGEntranceLimit](#)



From:

<https://kb.supremainc.com/kbtest/> - **BioStar Device SDK**

Permanent link:

[https://kb.supremainc.com/kbtest/doku.php?id=ko:bs2\\_removedevicezoneagentrancelimit](https://kb.supremainc.com/kbtest/doku.php?id=ko:bs2_removedevicezoneagentrancelimit)

Last update: **2018/03/22 10:52**