

BS2_RemoveDeviceZoneAGEntranceLimit

.....

.....

.....

.....

.....

.....

1

1

1

1

1

[Zone Control API](#) > [BS2_RemoveDeviceZoneAGEntranceLimit](#)

BS2_RemoveDeviceZoneAGEntranceLimit

Ethernet Access Group

```
#include "BS_API.h"
```

```
int BS2_RemoveDeviceZoneAGEntranceLimit(void* context, BS2_DEVICE_ID  
deviceId, const BS2_ZONE_ID* Ids, uint32_t IdCount);
```

- [In] *context* : Context
- [In] *deviceId* :
- [In] *Ids* : device zone id
- [In] *IdCount* : device zone id

BS_SDK_SUCCESS , 가

[BS2_GetDeviceZoneAGEntranceLimit](#)
[BS2_GetAllDeviceZoneAGEntranceLimit](#)
[BS2_SetDeviceZoneAGEntranceLimit](#)
[BS2_RemoveAllDeviceZoneAGEntranceLimit](#)

From:
<https://kb.supremainc.com/kbtest/> - **BioStar Device SDK**

Permanent link:
https://kb.supremainc.com/kbtest/doku.php?id=ko:bs2_removedevicezoneagentrancelimit&rev=1504569206

Last update: **2017/09/05 08:53**