

BS2_SetDeviceZone 1
 1
 1
 1
 1
 1

BS2_SetDeviceZone

Ethernet

BioStation 2 (1.5.0 only)
BioStation A2 (1.4.0 only)
BioEntry P2 (1.0.0 only)

```
#include "BS_API.h"

int BS2_SetDeviceZone(void* context, BS2_DEVICE_ID deviceId, const
BS2DeviceZone* deviceZones, uint32_t deviceZoneCount);
```

[BS2DeviceZone](#)

- [In] *context* : Context
- [In] *deviceId* :
- [In] *deviceZones* : device zone
- [In] *deviceZoneCount* : device zone

BS_SDK_SUCCESS , 가

- [BS2_GetDeviceZone](#)
- [BS2_GetAllDeviceZone](#)
- [BS2_RemoveDeviceZone](#)
- [BS2_RemoveAllDeviceZone](#)

BS2_SetDeviceZoneAlarm

From:

<https://kb.supremainc.com/kbtest/> - **BioStar Device SDK**

Permanent link:

https://kb.supremainc.com/kbtest/doku.php?id=ko:bs2_setdevicezone

Last update: **2018/03/22 10:49**