

|                                         |   |
|-----------------------------------------|---|
| <b>BS2_SetDeviceZoneAGEntranceLimit</b> | 1 |
| .....                                   | 1 |
| .....                                   | 1 |
| .....                                   | 1 |
| .....                                   | 1 |
| .....                                   | 1 |
| .....                                   | 1 |

[Zone Control API](#) > [BS2\\_SetDeviceZoneAGEntranceLimit](#)

## BS2\_SetDeviceZoneAGEntranceLimit

Ethernet Access Group

BioStation 2 (1.5.0 only)

BioStation A2 (1.4.0 only)

BioEntry P2 (1.0.0 only)

```
#include "BS_API.h"
```

```
int BS2_SetDeviceZoneAGEntranceLimit(void* context, BS2_DEVICE_ID deviceId,  
const BS2DeviceZoneAGEntranceLimit* deviceZoneAGEntranceLimits, uint32_t  
deviceZoneAGEntranceLimitCount);
```

[BS2DeviceZoneAGEntranceLimit](#)

- [In] *context* : Context
- [In] *deviceId* :
- [In] *deviceZoneAGEntranceLimits* : device zone Access Group
- [In] *deviceZoneAGEntranceLimitCount* : device zone Access Group

BS\_SDK\_SUCCESS , 가

[BS2\\_GetDeviceZoneAGEntranceLimit](#)

[BS2\\_GetAllDeviceZoneAGEntranceLimit](#)

[BS2\\_RemoveDeviceZoneAGEntranceLimit](#)

## BS2\_RemoveAllDeviceZoneAGEntranceLimit

From:

<https://kb.supremainc.com/kbtest/> - **BioStar Device SDK**

Permanent link:

[https://kb.supremainc.com/kbtest/doku.php?id=ko:bs2\\_setdevicezoneagentrancelimit](https://kb.supremainc.com/kbtest/doku.php?id=ko:bs2_setdevicezoneagentrancelimit)

Last update: **2018/03/22 10:52**