

BS2_SetDeviceZoneAGEntranceLimit 1
..... 1
..... 1
..... 1
..... 1

[Zone Control API](#) > [BS2_SetDeviceZoneAGEntranceLimit](#)

BS2_SetDeviceZoneAGEntranceLimit

Ethernet Access Group

```
#include "BS_API.h"

int BS2_SetDeviceZoneAGEntranceLimit(void* context, BS2_DEVICE_ID deviceId,
const BS2DeviceZoneAGEntranceLimit* deviceZoneAGEntranceLimits, uint32_t
deviceZoneAGEntranceLimitCount);
```

[BS2DeviceZoneAGEntranceLimit](#)

- [In] *context* : Context
- [In] *deviceId* :
- [In] *deviceZoneAGEntranceLimits* : device zone Access Group
- [In] *deviceZoneAGEntranceLimitCount* : device zone Access Group

BS_SDK_SUCCESS , 가

[BS2_GetDeviceZoneAGEntranceLimit](#)
[BS2_GetAllDeviceZoneAGEntranceLimit](#)
[BS2_RemoveDeviceZoneAGEntranceLimit](#)
[BS2_RemoveAllDeviceZoneAGEntranceLimit](#)

From:

<https://kb.supremainc.com/kbtest/> - **BioStar Device SDK**

Permanent link:

https://kb.supremainc.com/kbtest/doku.php?id=ko:bs2_setdevicezoneagentrancelimit&rev=1504569100

Last update: **2017/09/05 08:51**