

BS2_SetDeviceZoneAlarm 1

..... 1

..... 1

..... 1

..... 1

[Zone Control API](#) > [BS2_SetDeviceZoneAlarm](#)

BS2_SetDeviceZoneAlarm

Ethernet

```
#include "BS_API.h"
```

```
int BS2_SetDeviceZoneAlarm(void* context, BS2_DEVICE_ID deviceId, uint8_t  
alarmed, BS2_ZONE_ID* zoneIds, uint32_t zoneIdCount);
```

- [In] *context* : Context
- [In] *deviceId* :
- [In] *alarmed* :
- [In] *zoneIds* : device zone id
- [In] *zoneIdCount* : device zone id

BS_SDK_SUCCESS , 가

[BS2_GetDeviceZone](#)

[BS2_GetAllDeviceZone](#)

[BS2_SetDeviceZone](#)

[BS2_RemoveDeviceZone](#)

[BS2_RemoveIntrusionAlarmZone](#)

[BS2_RemoveAllDeviceZone](#)

From:

<https://kb.supremainc.com/kbtest/> - **BioStar Device SDK**

Permanent link:

https://kb.supremainc.com/kbtest/doku.php?id=ko:bs2_setdevicezonealarm&rev=1504534026

Last update: **2017/09/04 23:07**