

BS2_SetIntrusionAlarmZoneArm

.....

.....

.....

.....

.....

.....

.....

1

1

1

1

1

1

[Zone Control API](#) > [BS2_SetIntrusionAlarmZoneAlarm](#)

BS2_SetIntrusionAlarmZoneArm

/ .

BioStation 2 (1.5.0 only)

BioStation A2 (1.4.0 only)

BioEntry P2 (1.0.0 only)

```
#include "BS_API.h"
```

```
int BS2_SetIntrusionAlarmZoneArm(void* context, uint32_t deviceId, uint8_t  
armed, uint32_t* zoneIds, uint32_t zoneIdCount);
```

- [In] *context* : Context
- [In] *deviceId* :
- [In] *armed* :
- [In] *zoneIds* : intrusion alarm zone id
- [In] *zoneIdCount* : intrusion alarm zone id

BS_SDK_SUCCESS , 가

.

[BS2_GetIntrusionAlarmZone](#)

[BS2_GetIntrusionAlarmZoneStatus](#)

[BS2_GetAllIntrusionAlarmZoneStatus](#)

[BS2_SetIntrusionAlarmZone](#)

[BS2_SetIntrusionAlarmZoneAlarm](#)

[BS2_RemoveIntrusionAlarmZone](#)

[BS2_RemoveAllIntrusionAlarmZone](#)

From:

<https://kb.supremainc.com/kbtest/> - **BioStar Device SDK**

Permanent link:

https://kb.supremainc.com/kbtest/doku.php?id=ko:bs2_setintrusionalarmzonearm

Last update: **2018/03/22 10:50**