

BS2_SetIntrusionAlarmZoneArm 1
..... 1
..... 1
..... 1
..... 1

[Zone Control API](#) > [BS2_SetIntrusionAlarmZoneAlarm](#)

BS2_SetIntrusionAlarmZoneArm

```
#include "BS_API.h"

int BS2_SetIntrusionAlarmZoneArm(void* context, uint32_t deviceId, uint8_t armed, uint32_t* zoneIds, uint32_t zoneIdCount);
```

- [In] *context* : Context
- [In] *deviceId* :
- [In] *armed* :
- [In] *zoneIds* : intrusion alarm zone id
- [In] *zoneIdCount* : intrusion alarm zone id

BS_SDK_SUCCESS , 가

[BS2_GetIntrusionAlarmZone](#)
[BS2_GetIntrusionAlarmZoneStatus](#)
[BS2_GetAllIntrusionAlarmZoneStatus](#)
[BS2_SetIntrusionAlarmZone](#)
[BS2_SetIntrusionAlarmZoneAlarm](#)
[BS2_RemoveIntrusionAlarmZone](#)
[BS2_RemoveAllIntrusionAlarmZone](#)

From:
<https://kb.supremainc.com/kbtest/> - **BioStar Device SDK**

Permanent link:
https://kb.supremainc.com/kbtest/doku.php?id=ko:bs2_setintrusionalarmzonearm&rev=1504480920

Last update: **2017/09/04 08:22**