

2.5.0		1
-------	-------	---

2.5.0

2017-09-25

- SEOS (Elite Key, RF)
- CoreStation
- Intrusion Alarm Zone
- Ethernet Zone
- USB Export
- 가

1. SEOS (Elite Key, RF) iClass SEOS

- [BS2_GetCardConfigEx](#) 가
- [BS2_SetCardConfigEx](#) 가
- [BS2CardConfigEx](#) 가

2. CoreStation CoreStation CoreStation Master Controller Slave . CoreStation Master Controller UI CoreStation BioStar

- [BS2_GetSlaveExDevice](#) 가
- [BS2_SetSlaveExDevice](#) 가
- [BS2Rs485SlaveDeviceEX](#) 가

3. Intrusion Alarm Zone 가 , , (biostar1.X) , 3rd party alarm / , Video Visual map

```
* [[BS2_GetIntrusionAlarmZone]] 가
* [[BS2_GetIntrusionAlarmZoneStatus]] 가
* [[BS2_SetIntrusionAlarmZone]] 가
* [[BS2_SetIntrusionAlarmZoneAlarm]] 가
* [[BS2_RemoveIntrusionAlarmZone]] 가
* [[BS2_SetIntrusionAlarmZoneArm]] 가
* [[Configuration API#BS2IntrusionAlarmZoneBlob]] 가
```

4. Ethernet Zone Zone Master BioStar V2.x 가 가
 (Master ↔ Member) Ethernet TCP Zone 1.x
 Entrance Limit, Fire Alarm Zone .

- [BS2_GetDeviceZone](#) 가
- [BS2_SetDeviceZone](#) 가
- [BS2_RemoveDeviceZone](#) 가
- [BS2_SetDeviceZoneAlarm](#) 가
- [BS2DeviceZoneConfig](#) 가

5. USB Export USB
 Export / Import T&A . () BioStar
 가 USB , USB
 T&A USB , USB

- [BS2_GetUserListFromDir](#) 가
- [BS2_GetUserInfosFromDir](#) 가
- [BS2_GetLogFromDir](#) 가

5. 가 SDK 가

* [BS2_GetFilteredLogSinceEventId](#) 가

1. BS2_ScanFingerprint BS2_ScanFingerprintEx 가가
 outQuality 가가 .

```
#include "BS_API.h"
```

```
int BS2_ScanFingerprintEx(void* context, uint32_t deviceId, BS2Fingerprint*  
finger, uint32_t templateIndex, uint32_t quality, uint8_t templateFormat,  
uint32_t* outQuality, OnReadyToScan ptrReadyToScan);
```

From:

<https://kb.supremainc.com/kbtest/> - **BioStar Device SDK**

Permanent link:

https://kb.supremainc.com/kbtest/doku.php?id=ko:release_note_250&rev=1508216267

Last update: **2017/10/17 13:57**