

Table of Contents

en_part27_ethernet_zoneapi 1

en_part27_ethernet_zoneapi

- [BS2_GetDeviceZone](#)
- [BS2_GetAllDeviceZone](#)
- [BS2_SetDeviceZone](#)
- [BS2_RemoveDeviceZone](#)
- [BS2_RemoveAllDeviceZone](#)
- [BS2_SetDeviceZoneAlarm](#)
- [BS2_ClearDeviceZoneAccessRecord](#)
- [BS2_ClearAllDeviceZoneAccessRecord](#)
- [BS2_GetDeviceZoneAGEntranceLimit](#)
- [BS2_GetAllDeviceZoneAGEntranceLimit](#)
- [BS2_SetDeviceZoneAGEntranceLimit](#)
- [BS2_RemoveDeviceZoneAGEntranceLimit](#)
- [BS2_RemoveAllDeviceZoneAGEntranceLimit](#)

From:

<https://kb.supremainc.com/kbtest/> - **BioStar Device SDK**

Permanent link:

https://kb.supremainc.com/kbtest/doku.php?id=wiki:ebook:en_part27_ethernet_zoneapi

Last update: **2018/11/14 08:55**