

Table of Contents

How to set up an alarm zone 1


BioStar 1, Alarm, Zone

How to set up an alarm zone


BioStar allows you to set up an alarm zone where you can determine how doors in the zone behave when someone breaks into the zone.

You can set up a fire alarm zone by performing the following steps:


1. On the **Doors** page, click **Add New Zone**.

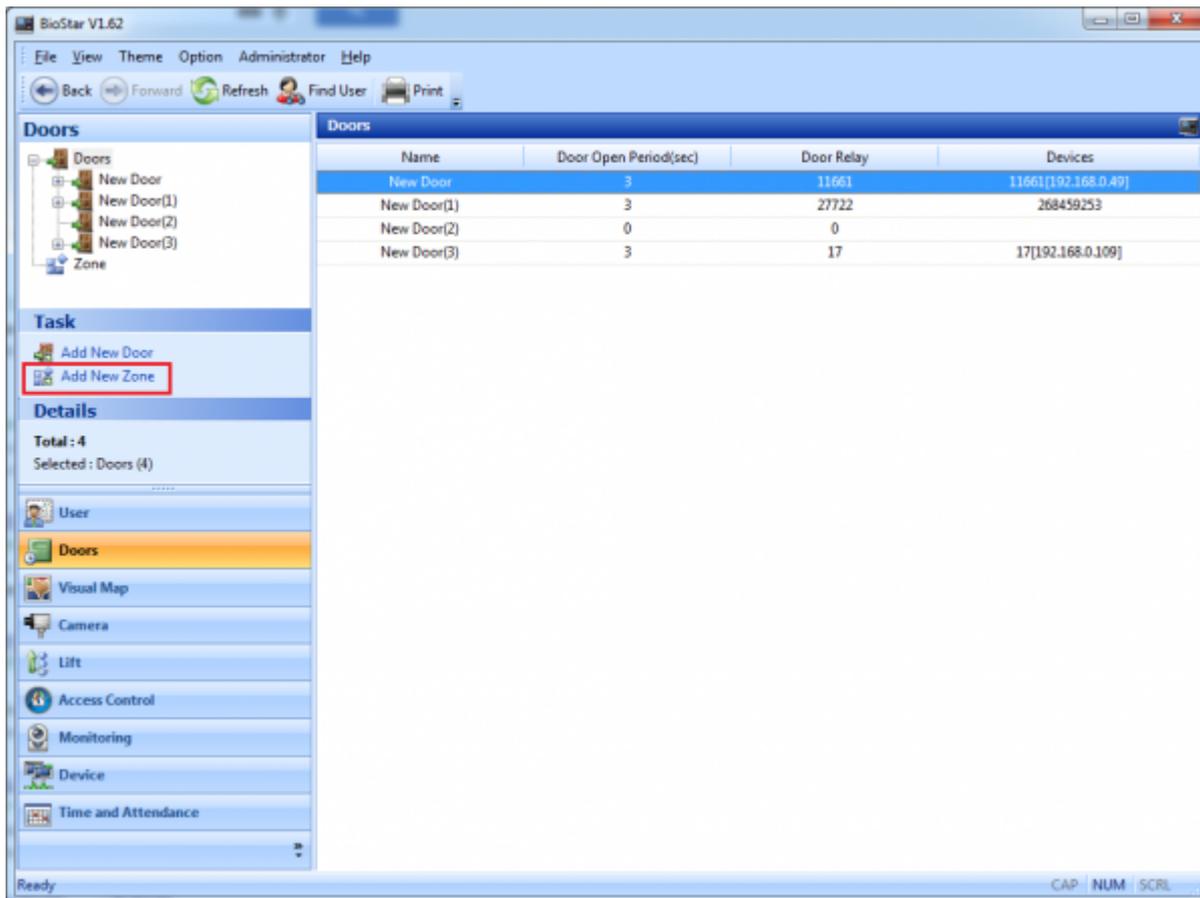



2. Enter a name for the alarm zone and choose **Alarm Zone** from the **Type** drop-down list.

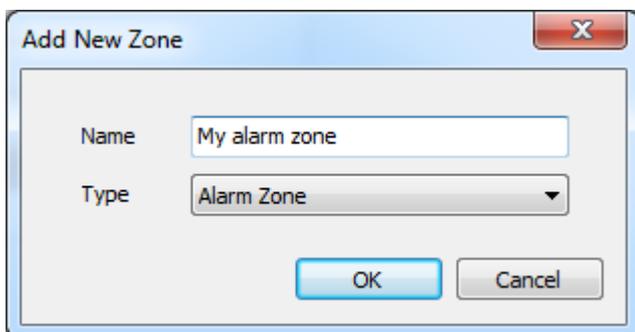


3. Click **Add Device** to add devices to the zone. This brings up the **Add Device** dialog.
4. Choose devices you want to add and click the right arrow button. This brings up the **Select Zone Attribute/Type** dialog.

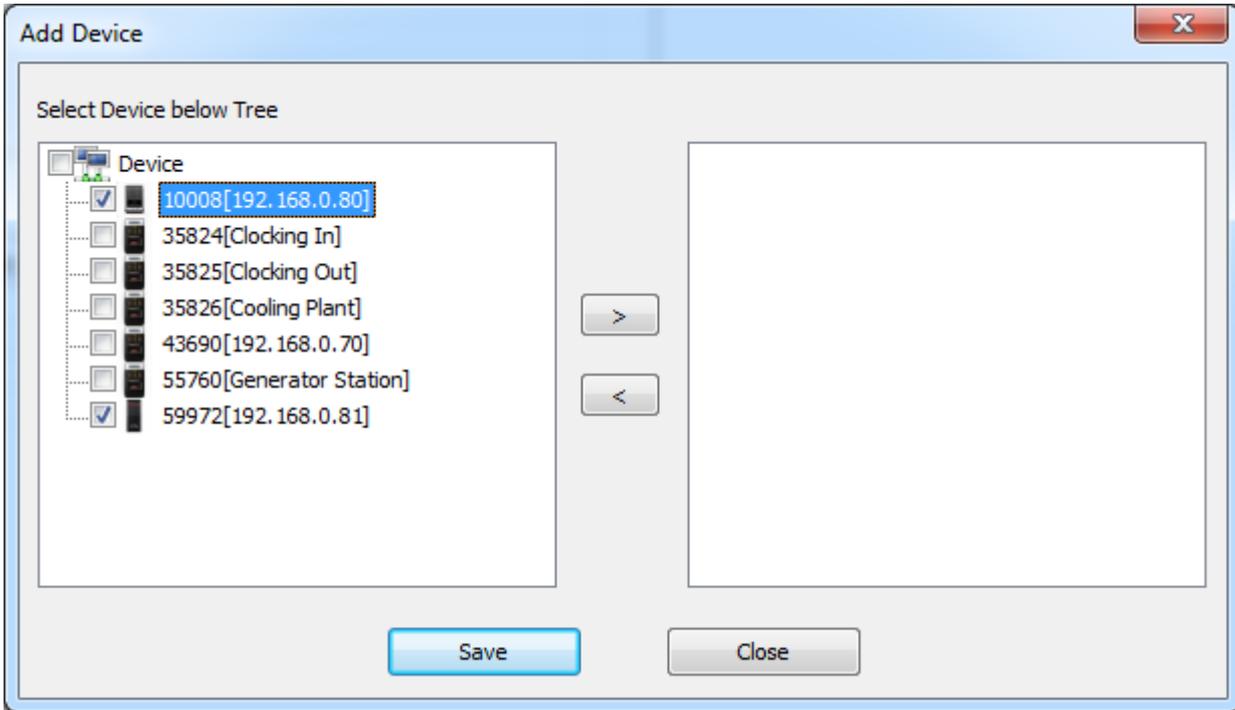

5. Choose from the **Device Attribute** drop-down list and choose **Card** or **Key** for **Arm/Disarm Type**. Then, click **OK** and **Save**.
If you set **Device Attribute** of a device as **Arm/Disarm**, you can arm and disarm the zone using the device.

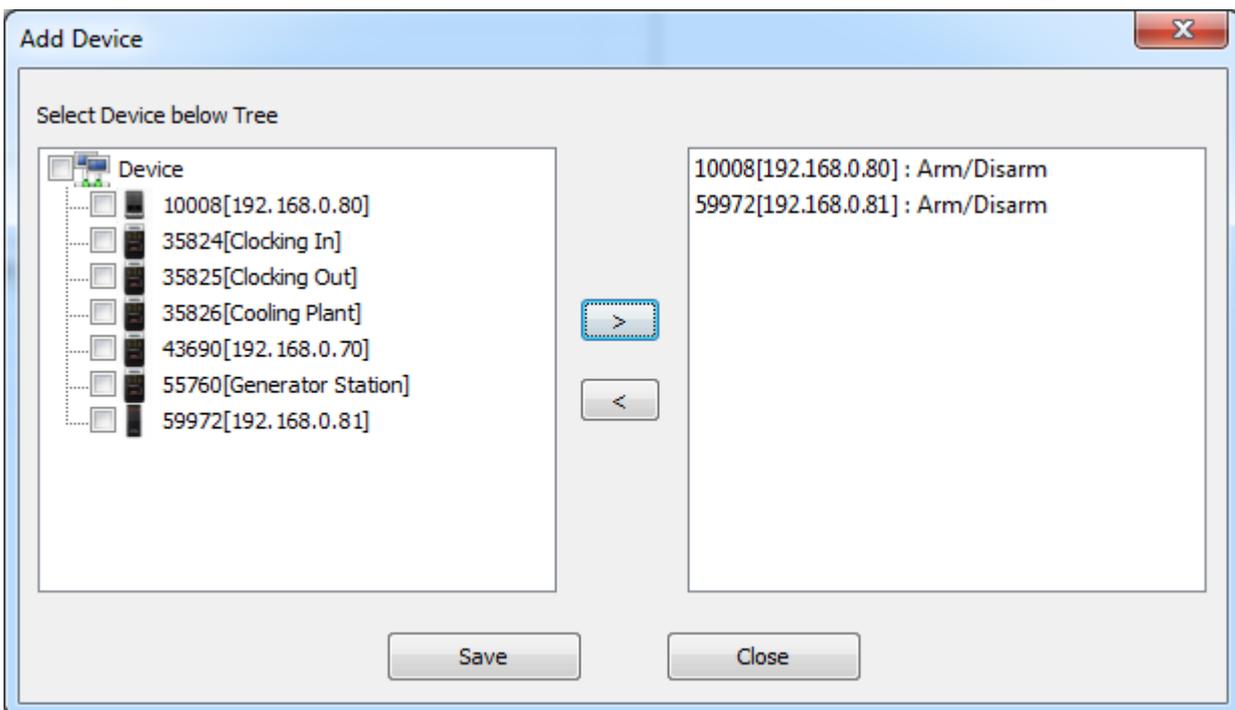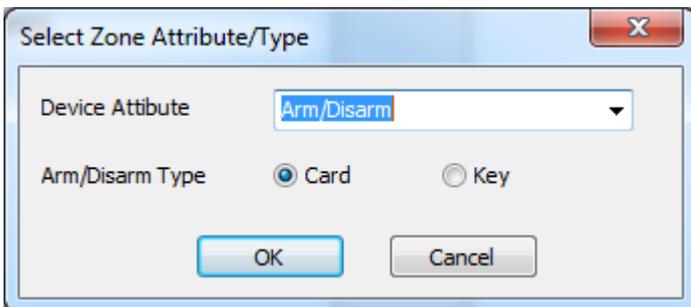


6. Click **Add Input** to determine the input type for the zone.

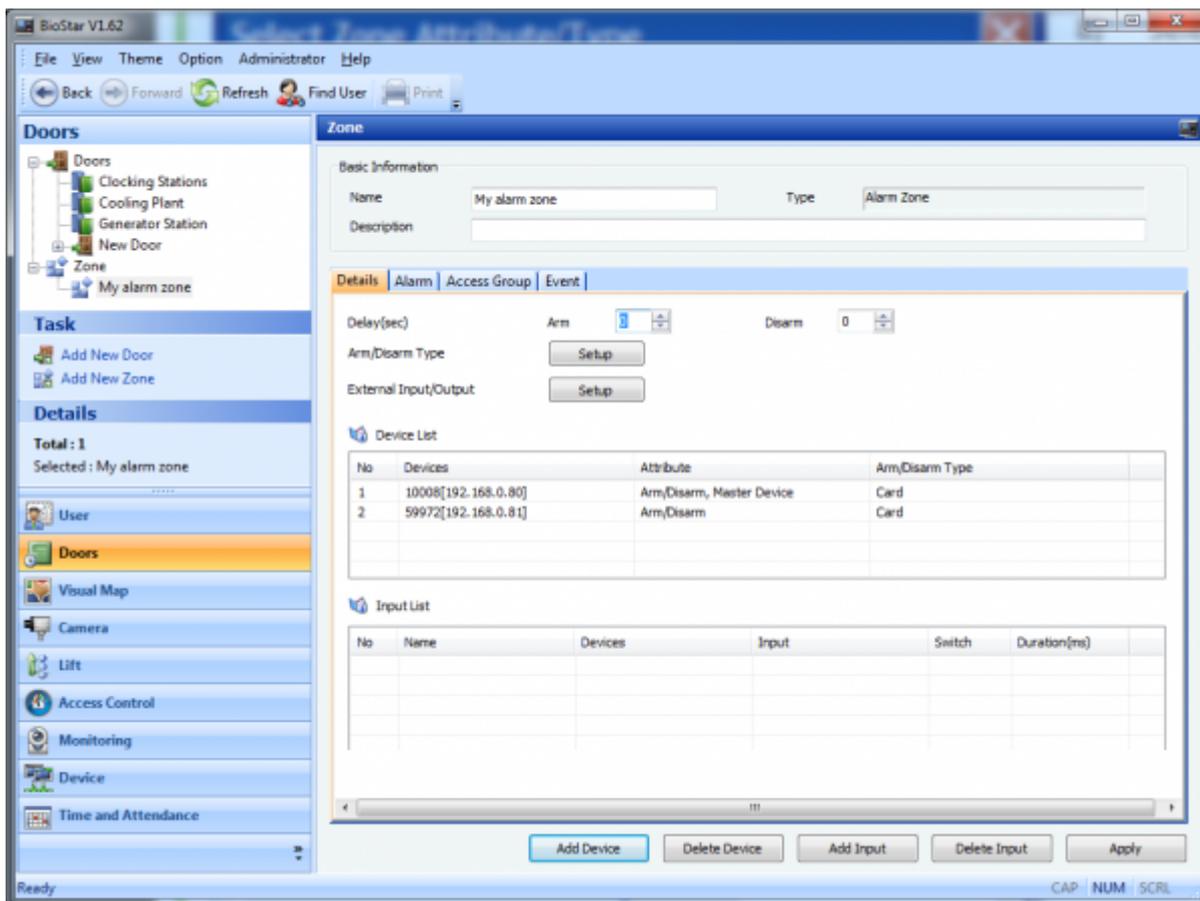


7. When there is an input signal from the input port specified here while the zone is armed, the alarm sets off.


- **Name:** Type in a name for the input.
- **Device:** Choose a device.
- **Available Input:** Choose an input that you want to receive a signal from.
- **Switch:** Choose a switch type
- **Duration:** the length of an input signal to trigger the alarm

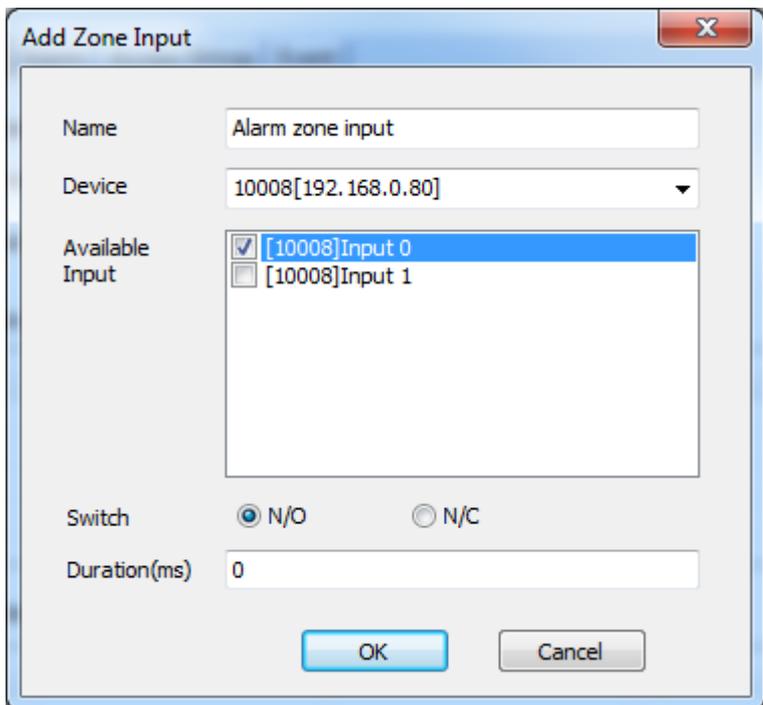


8. Now it's time to take a look at the settings on the **Details** tab.

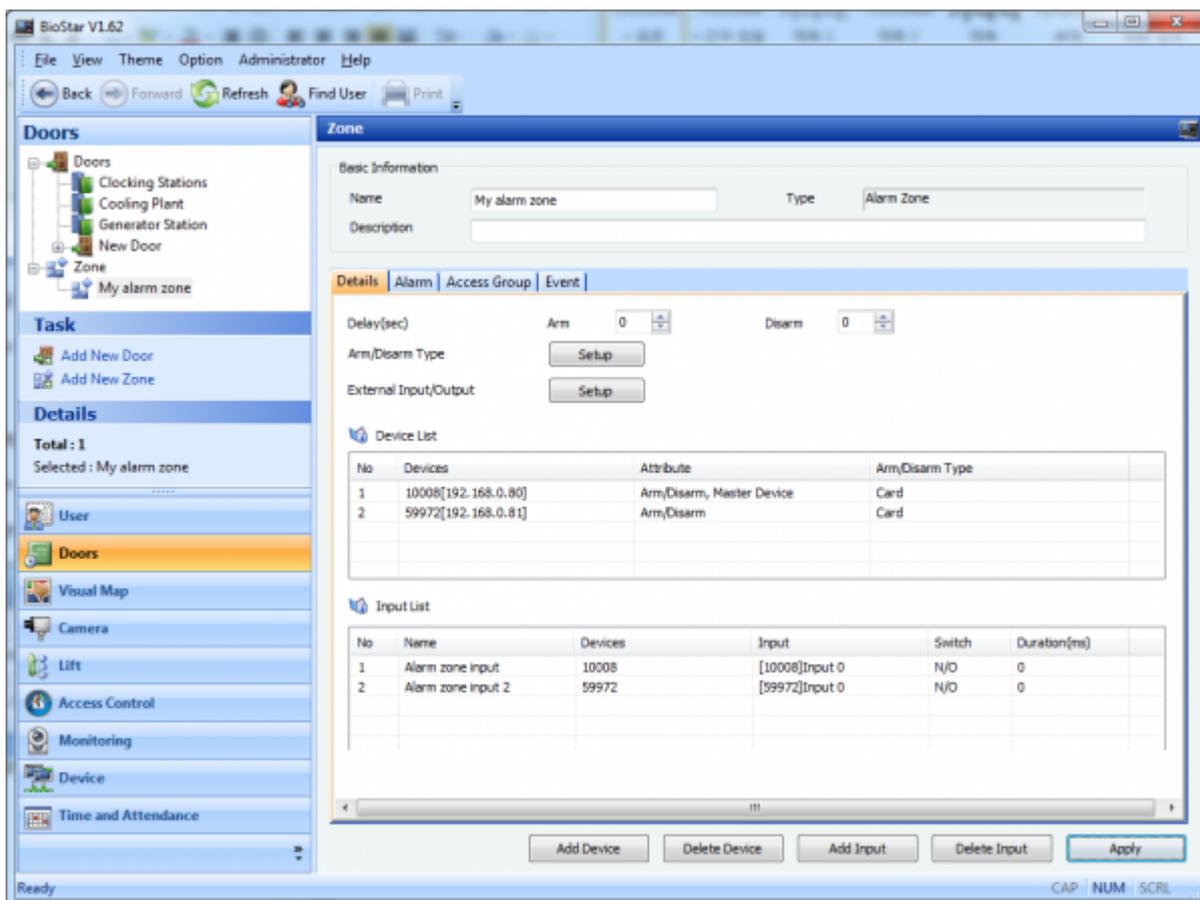


9. You can specify how to arm and disarm the zone on the **Arm/Disarm Setting** dialog. Click **Arm/Disarm Type** to bring up the dialog.

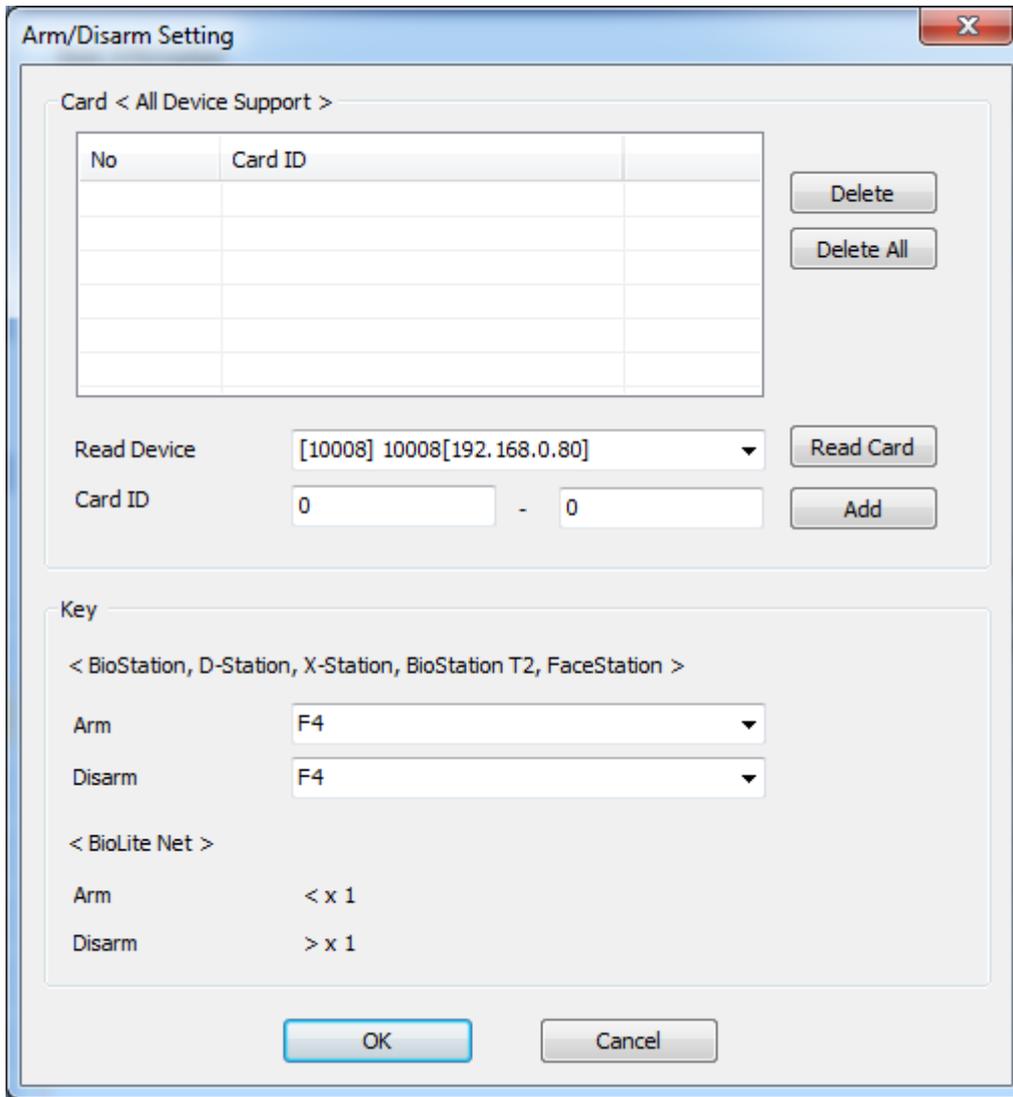

- 1) Choose a device on which you read a card from the **Read Device** drop-down list.
- 2) Click **Read Card** to read a card.
- 3) Click **Add** to register the card.

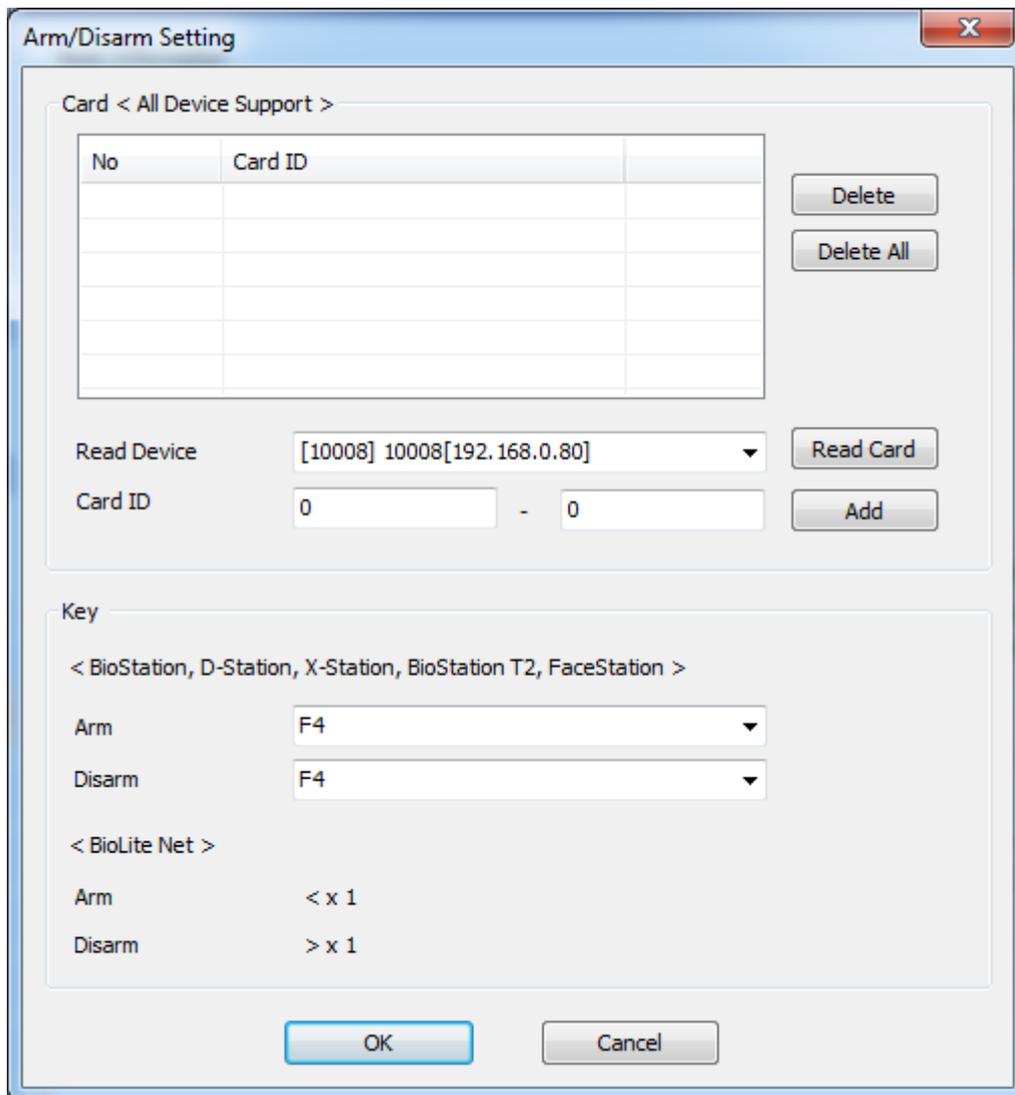

4) When we add the devices to this zone, we have chosen **Card** for the method to arm and disarm the zone, so the settings in the **Key** section on the dialog is not applied to this zone. If you have chosen **Key** for the **Arm/Disarm Type** option in step 5, you can arm and disarm the zone using the function keys of the device specified here.

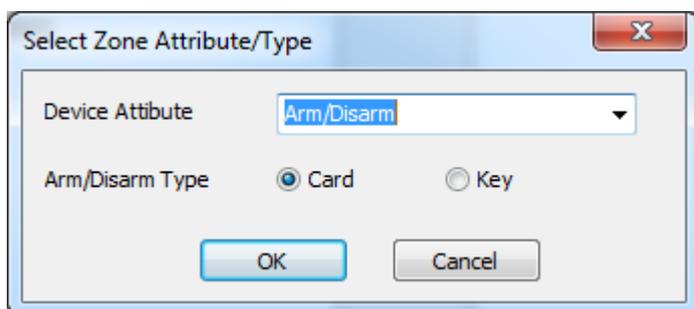

10. Click **Apply** to transfer the settings to the devices.

Arm/Disarm Setting [Close]

Card < All Device Support >

No	Card ID	
1	000-3829098359	

[Delete] [Delete All]

Read Device: [10008] 10008[192.168.0.80] [Read Card]

Card ID: 0 - 3829098359 [Add]

Key

< BioStation, D-Station, X-Station, BioStation T2, FaceStation >

Arm: F4 [v]

Disarm: F4 [v]

< BioLite Net >

Arm: < x 1

Disarm: > x 1

[OK] [Cancel]

From:
<https://kb.supremainc.com/knowledge/> -

Permanent link:
https://kb.supremainc.com/knowledge/doku.php?id=en:1xfaq_how_to_set_up_an_alarm_zone

Last update: **2016/01/05 09:44**