

# Table of Contents

Unlimited Floor Level Supported ..... 1

# Unlimited Floor Level Supported

From BioStar 2 v2.7.3, unlimited floor level is supported. But in current Suprema devices, firmware is not supported for unlimited floor level. (May, 2019)

As the capacity of devices differ, the 1st generation entry level devices has more strict limitation than the 2nd generation devices. Please refer to the article below and check the capacity differences. [\[BioStar 2\] Notice for Usage of Combined Environment 1st Generation Entry Level Devices and 2nd Generation Devices](#)

- If you have generated more floor levels than the devices' capability, devices would lose sync with BioStar 2 server.
- If your device lost sync with Biostar 2 server, then the system would not operate properly.

	BioStar 2 (From v2.7.3)	1st Generation Device	2nd Generation Device
<b>Max Floor Level</b>	Unlimited	128 <i>* Not supported in BioLite Net / BioEntry W / BioEntry Plus</i>	2048

- From BioStar 2 v2.7.3, Access Level and Access Group are supported without limitation.
- Referred article : [Unlimited Access Level and Access Group Supported](#)

From: <https://kb.supremainc.com/knowledge/> -

Permanent link: [https://kb.supremainc.com/knowledge/doku.php?id=en:unlimited\\_floor\\_level\\_supported](https://kb.supremainc.com/knowledge/doku.php?id=en:unlimited_floor_level_supported)

Last update: **2021/12/20 10:15**