


..... 1

2

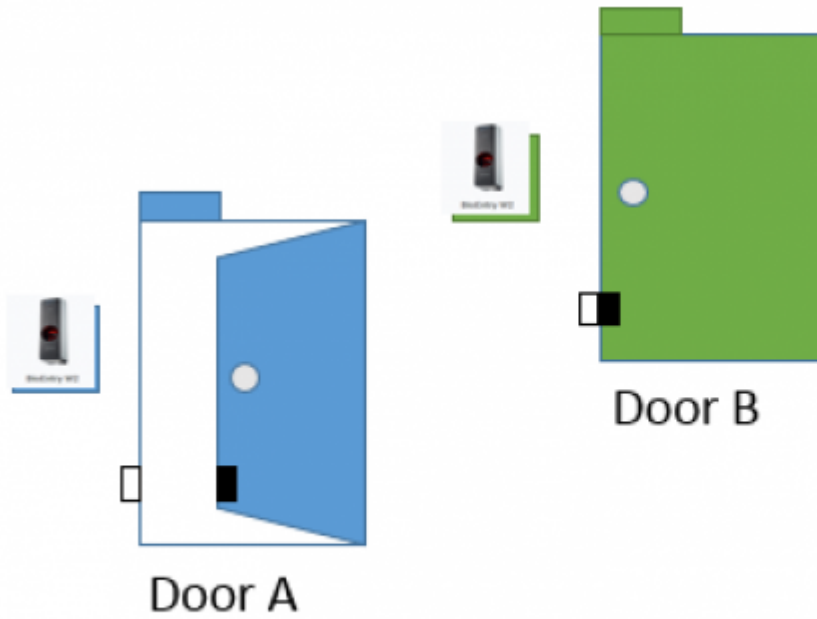

Door B will only open if door A is closed and locked

: BioStar2 v2.6

CoreStation , CoreStation RS-485

FW : cs40_v1_1_0_20180317

CoreStation

CoreStation


[interlock_zone.mp4](#)

- 1. BioStar 2 AC Standard

- 2. **(ZONE)**

- 3. **(DEVICE)**


- 4. CoreStation 가

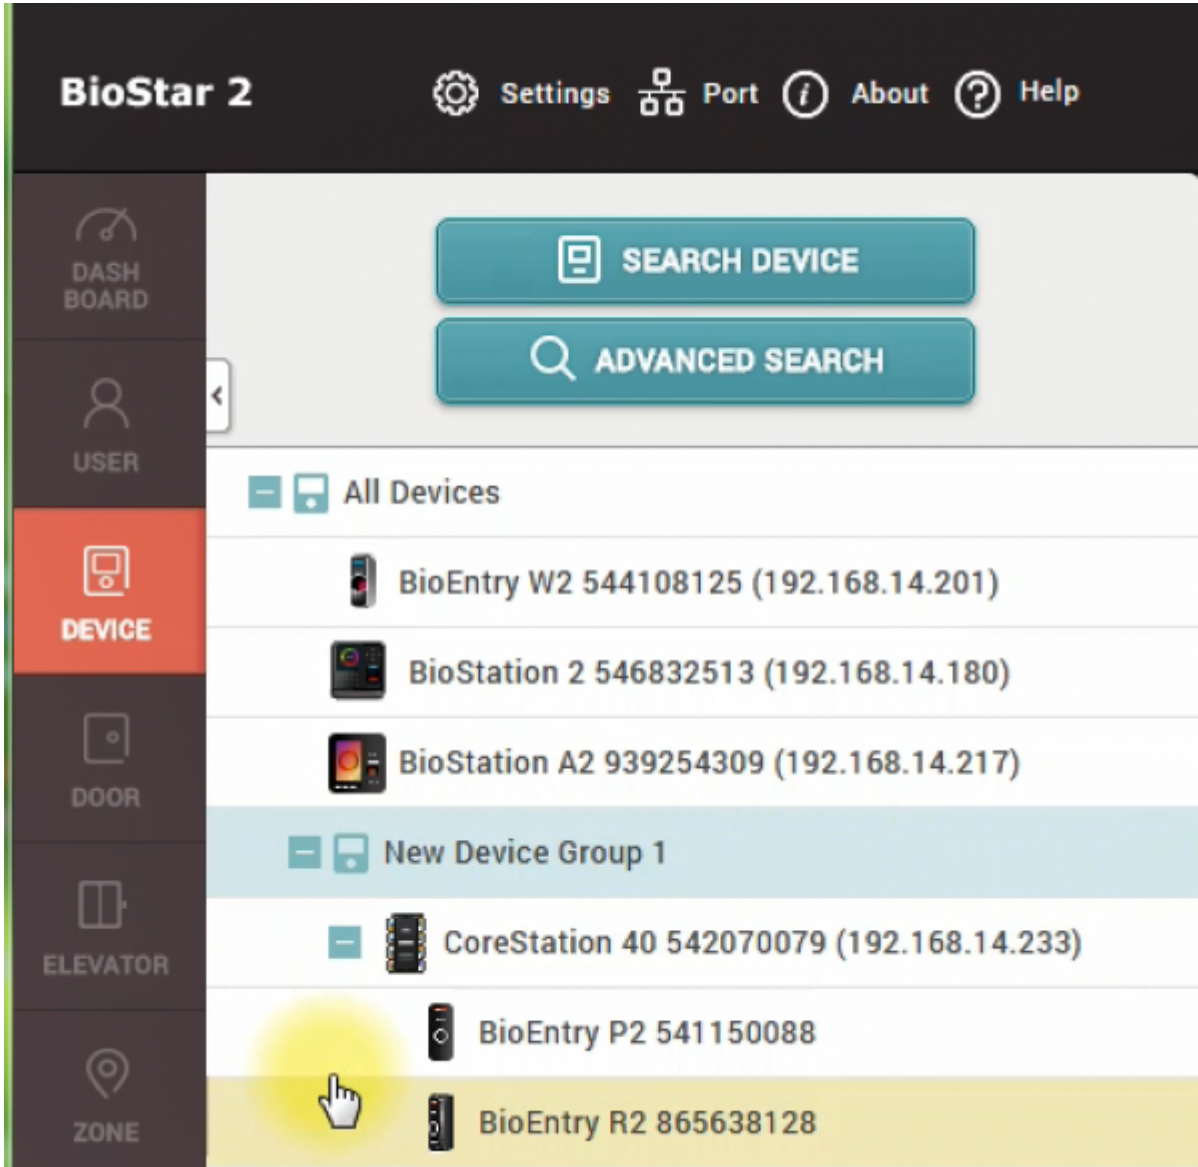

- 5. CoreStation V1.1.0

- 6. **(DOOR)** 2 가

- 7.

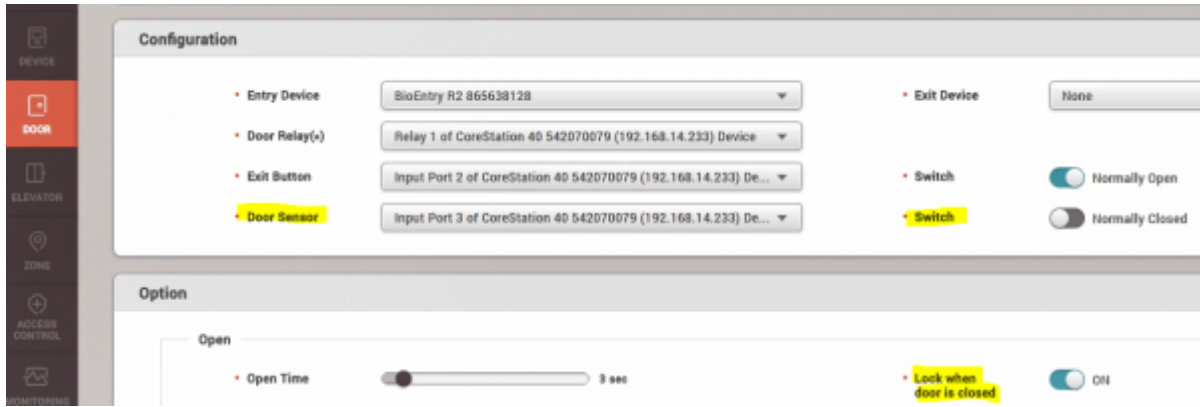


8. (ZONE)


9. 가

10.

- 4

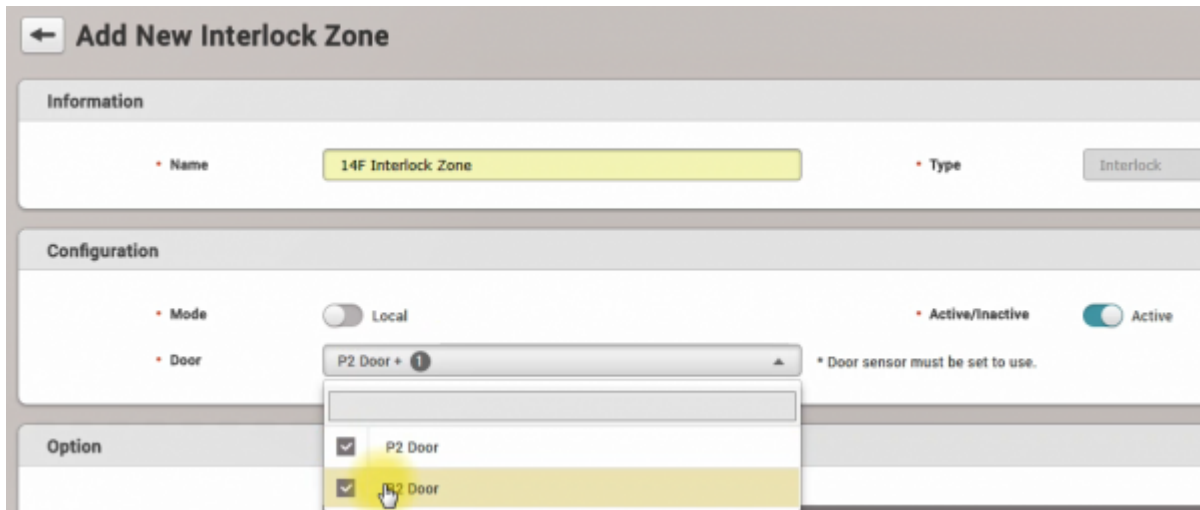


11. 가

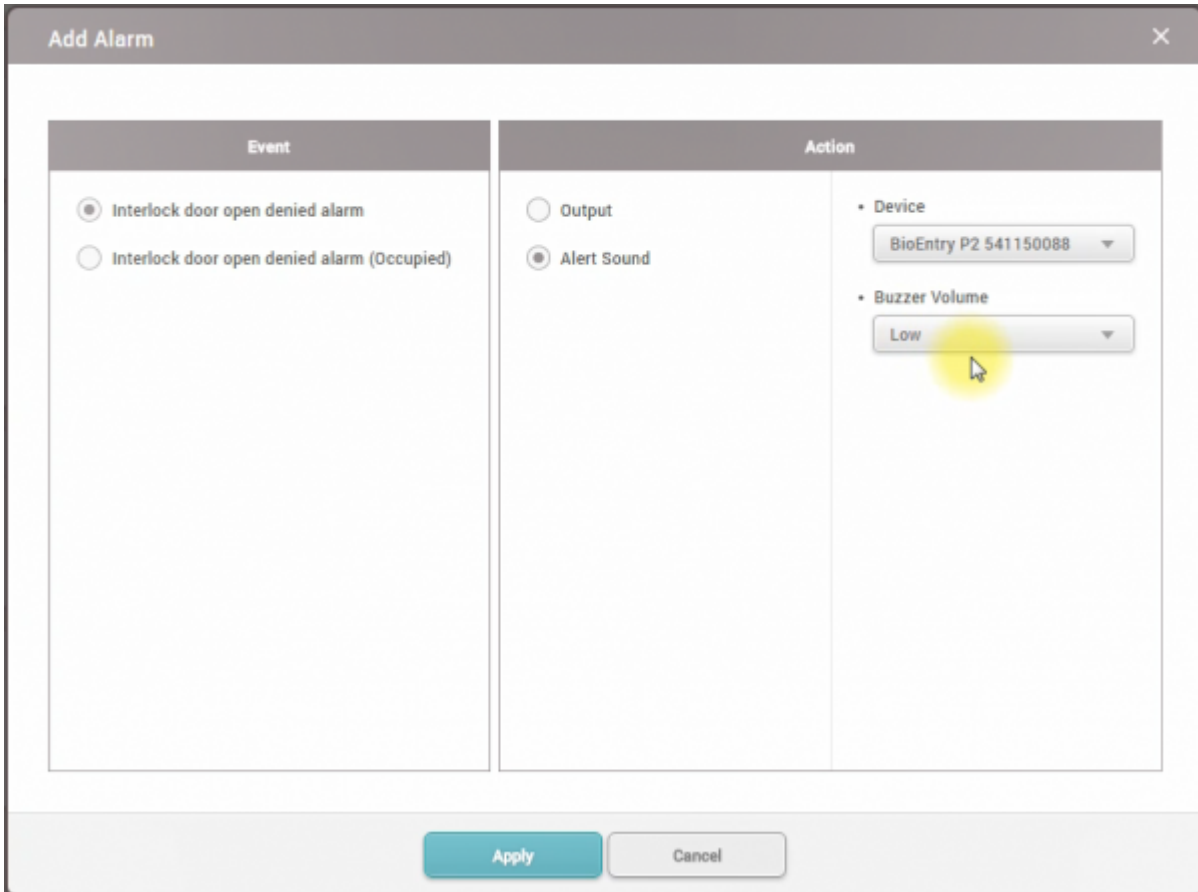

12. (MONITORING)

13.

14. (Interlock door open denied alarm)

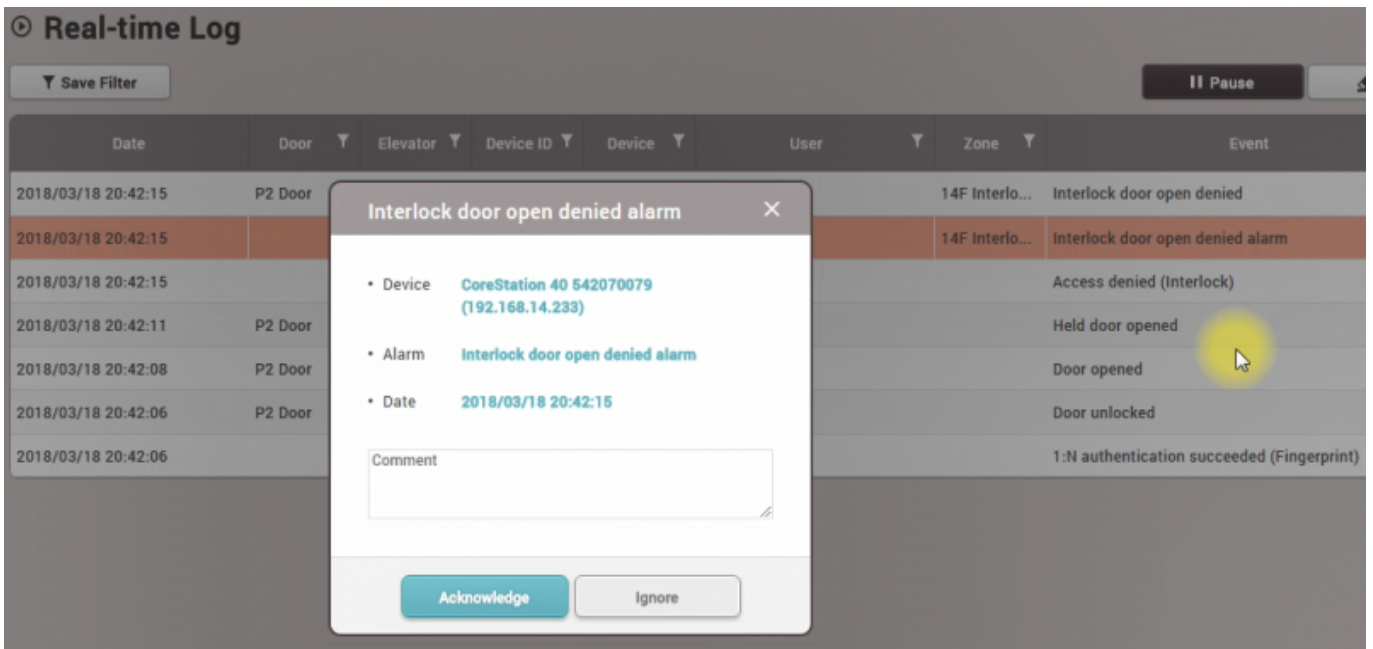

From:

<http://kb.supremainc.com/knowledge/> -

Permanent link:

http://kb.supremainc.com/knowledge/doku.php?id=ko:how_to_configure_an_interlock_zone

Last update: **2018/07/19 16:32**