Table of Contents


Anti-Tailgating At Doors With Input Signals	1
1. Anti-tailgating at door	2
2. Anti-tailgating on the device	4

Anti-Tailgating At Doors With Input Signals

The anti-tailgating feature is supported from the BioStar 2.7.8 and the latest firmware of Suprema devices. To use this feature, you need to upgrade both BioStar 2 and device firmwares to the versions listed below or above.


Model	Version
BioStar 2 SW	v2.7.8
BioStation 2	v1.8.0
BioStation A2	v1.7.0
FaceStation 2	v1.3.0
BioLite N2	v1.2.0
FaceLite	v1.1.0
BioEntry W2	v1.4.0
BioStation L2	v1.5.0
BioEntry P2	v1.3.0
Xpass 2	v1.0.0
FaceStation F2	v1.0.0
X-Station 2	v1.0.0

When you match both BioStar 2 server and device firmware version, you can configure anti-tailgating feature in 'Door' and 'Device'.

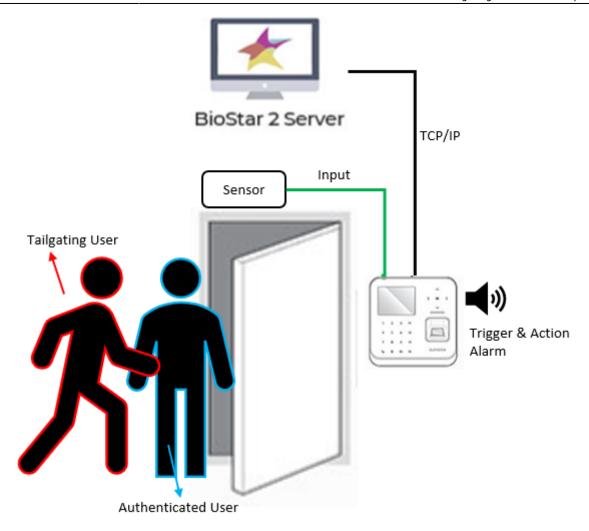

1. Anti-tailgating at door


In the door configuration page, you can see the anti-tailgating feature as below. You can configure anti-tailgating as an exit button or a door sensor.

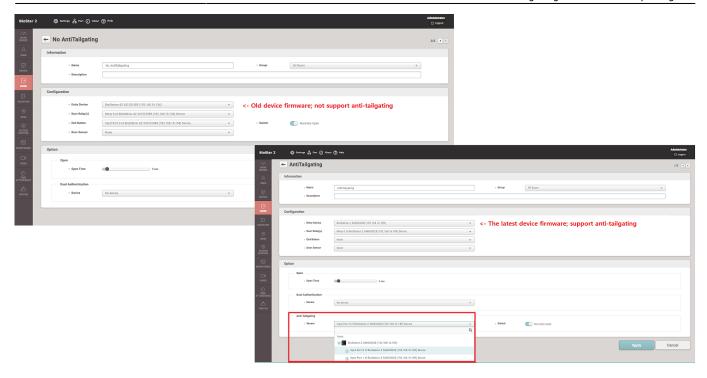

- If there is an input and the anti-tailgating feature is 'ON', you can see the Access Denied(Anti-Tailgating) in Event Log.
- Note: The anti-tailgating feature is supported when the input is on, however, there is no 'Input Detected' log.




• Alarm and Trigger & Action event for doors are not supported by the anti-tailgating feature.

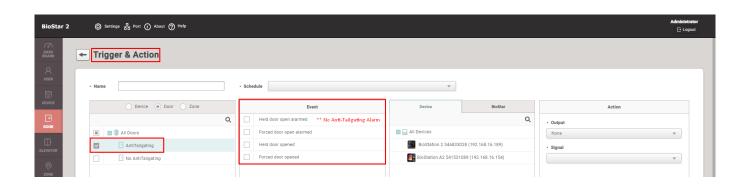

2. Anti-tailgating on the device

With the supporting firmware version, you can configure the Trigger & Action for devices with the anti-tailgating feature.

• BioStar 2 - Device - (Choose your device) - Advanced - Trigger & Action

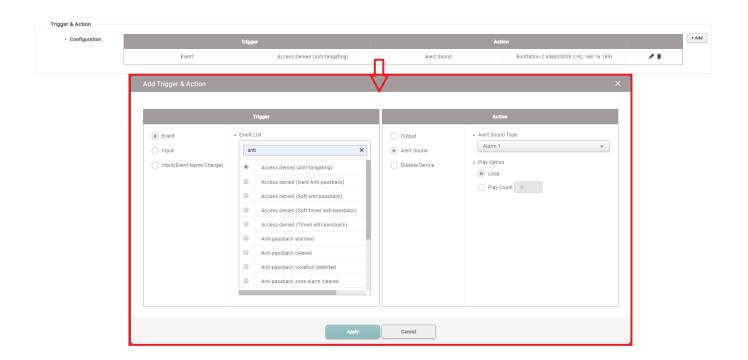

• If you try to re-add the anti-tailgating feature configured device in the lower BioStar 2 version, you need to do factory reset the device.

From:

http://kb.supremainc.com/knowledge/ -

Permanent link:

http://kb.supremainc.com/knowledge/doku.php?id=en:anti-tailgating_at_doors_with_input_signals

Last update: 2021/12/17 10:53