

Table of Contents

How to Activate Biostar 2 License	1
Before Activating Biostar 2 License	1
How to Activate License for Biostar 2 Version 2.9.0 and Above	1
Video Demo for Activating License for Biostar 2 Version 2.9.0 and Above	4
How to Activate License for Biostar 2 Version 2.8.16 and Lower	4
Video Demo for Activating License for Biostar 2 Version 2.8.16 and Lower	7

[System Configuration](#), [BioStar 2](#), [License](#)

How to Activate Biostar 2 License


Before Activating Biostar 2 License

1. What is supported with BioStar 2's licenses?

Refer to the [FAQ article](#) for details.


2. What are global zone and local zone?

- Global Zone : TCP/IP based zone configuration (BioStar 2 server is a master of the zone)
- Local Zone : RS485 based zone configuration (Master device is a master of the zone)
- The zone master makes logical decisions and controls functionality

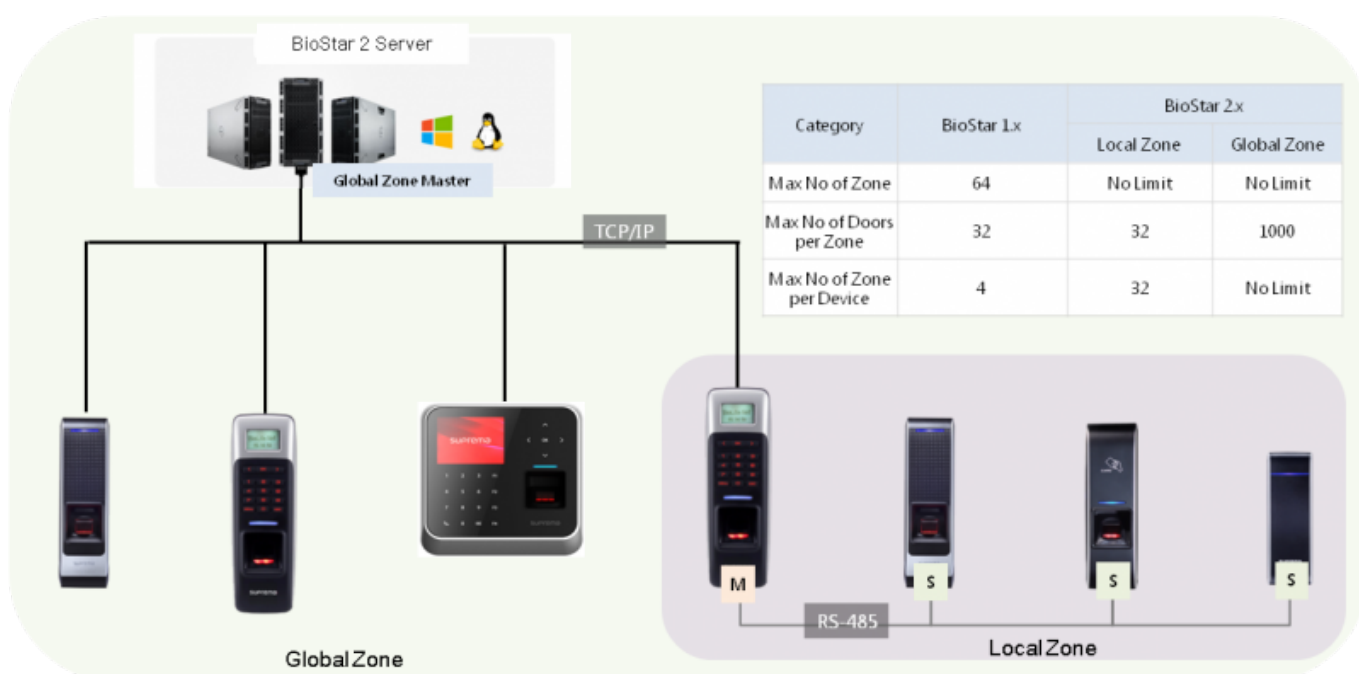


How to Activate License for Biostar 2 Version 2.9.0 and Above

1. Open BioStar 2 → Log in to BioStar 2 → Go to Settings Menu.

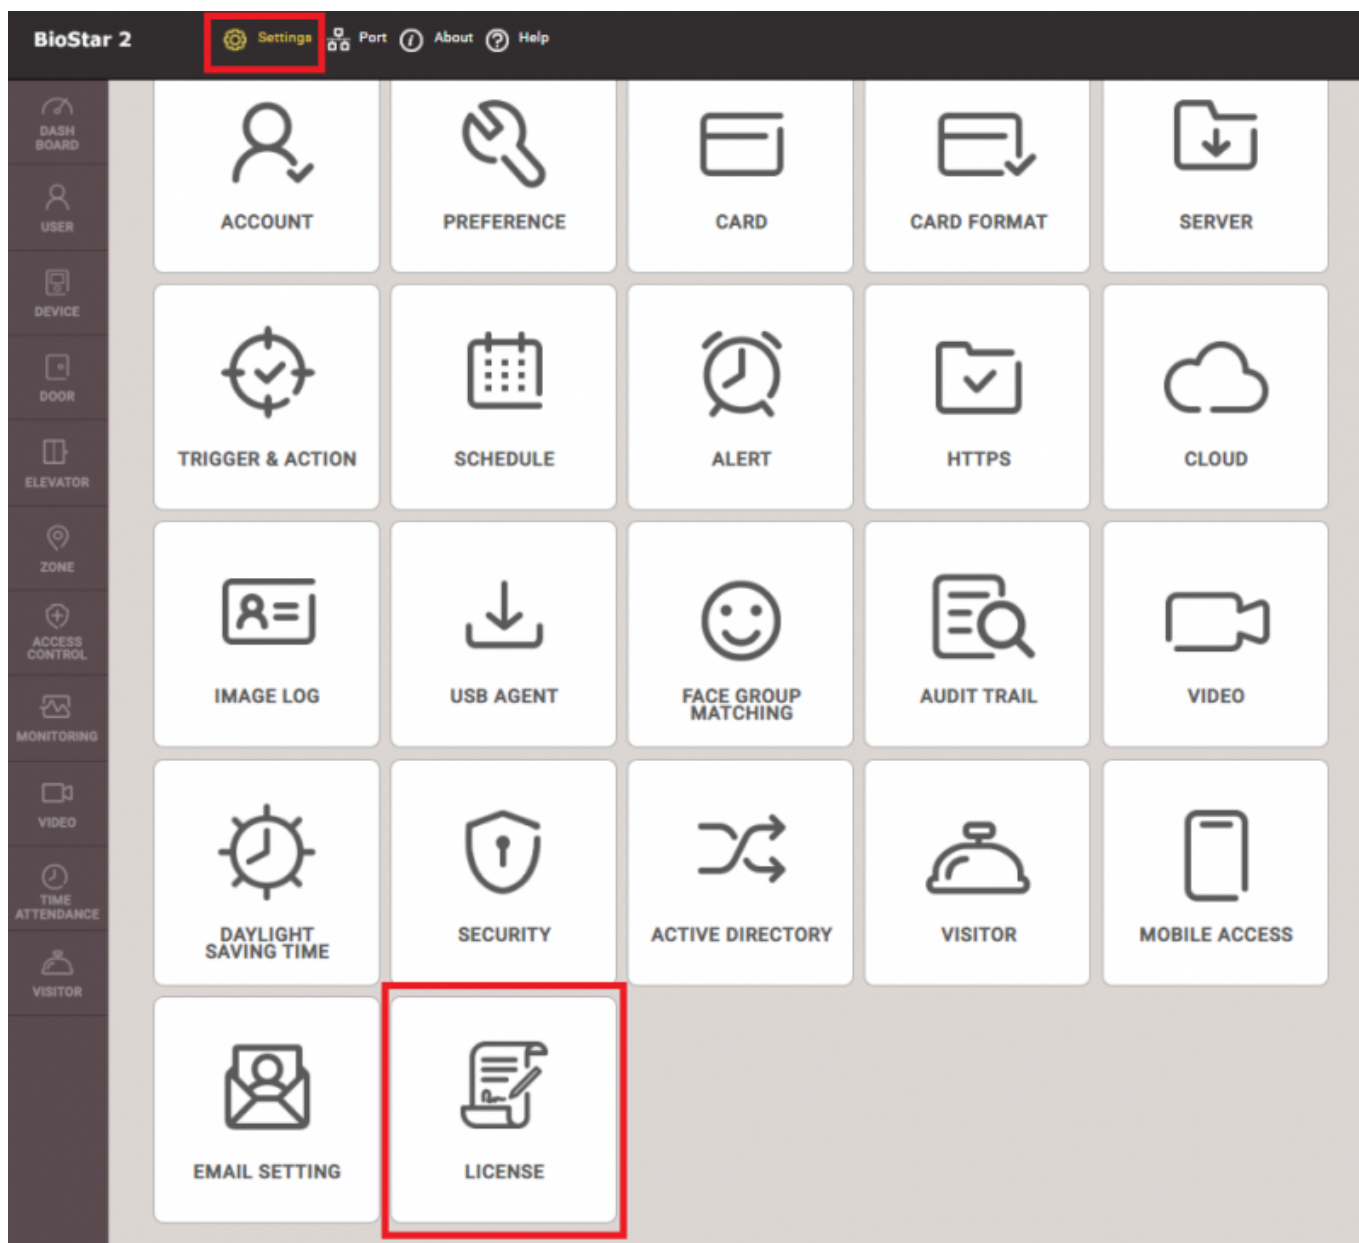


2. Check if the server is connected to the Internet. If connected, you can activate via online.

3. Enter the customer site name and activation key and click **Activate**. You can receive activation key from Suprema or your local distributor.

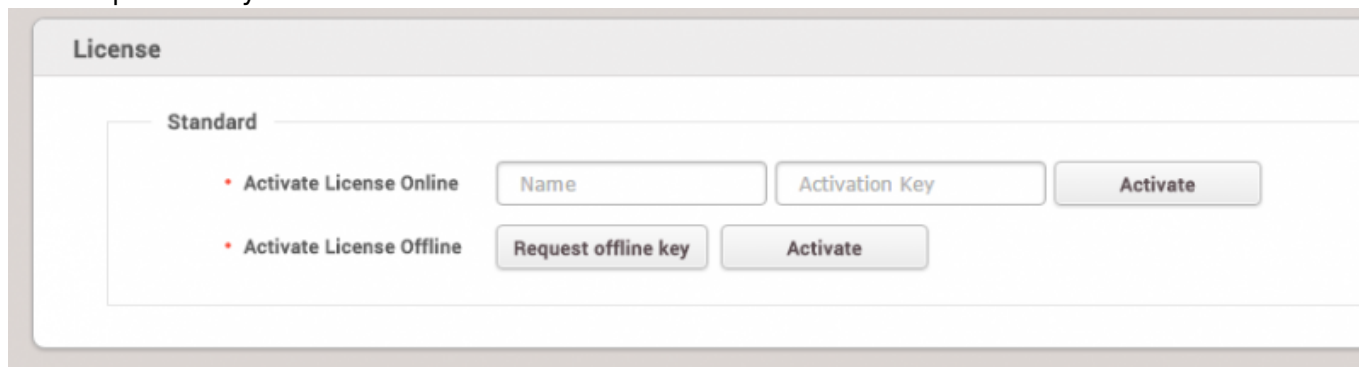

4. If the server is not connected to the Internet, click **Request offline Key** and download offline key request file.

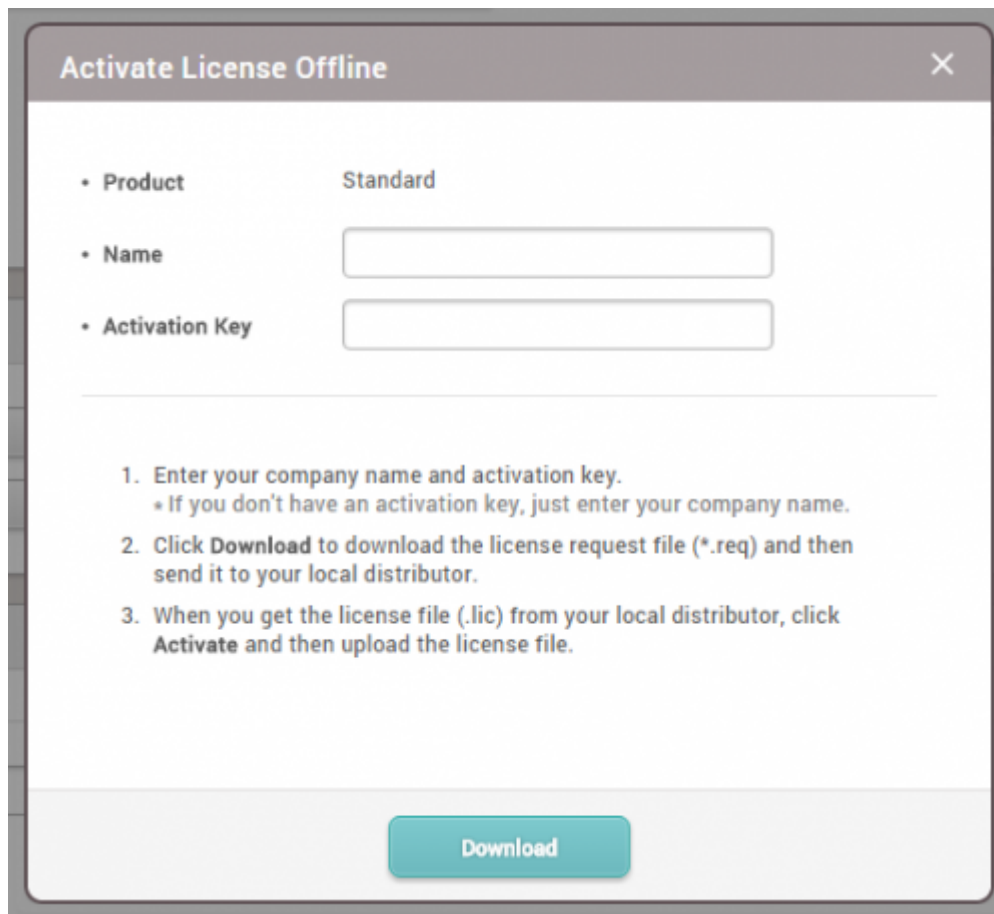

The dialog box is titled "Activate License Offline" and contains the following fields and instructions:

- Product: Standard
- Name:
- Activation Key:


Instructions:

1. Enter your company name and activation key.
* If you don't have an activation key, just enter your company name.
2. Click **Download** to download the license request file (*.req) and then send it to your local distributor.
3. When you get the license file (.lic) from your local distributor, click **Activate** and then upload the license file.

At the bottom, there is a teal button labeled "Download".

5. Send the offline key request file to Suprema and receive the offline license key in return.

6. Activate the license and check the information about compatible FW versions to use the updated new features.

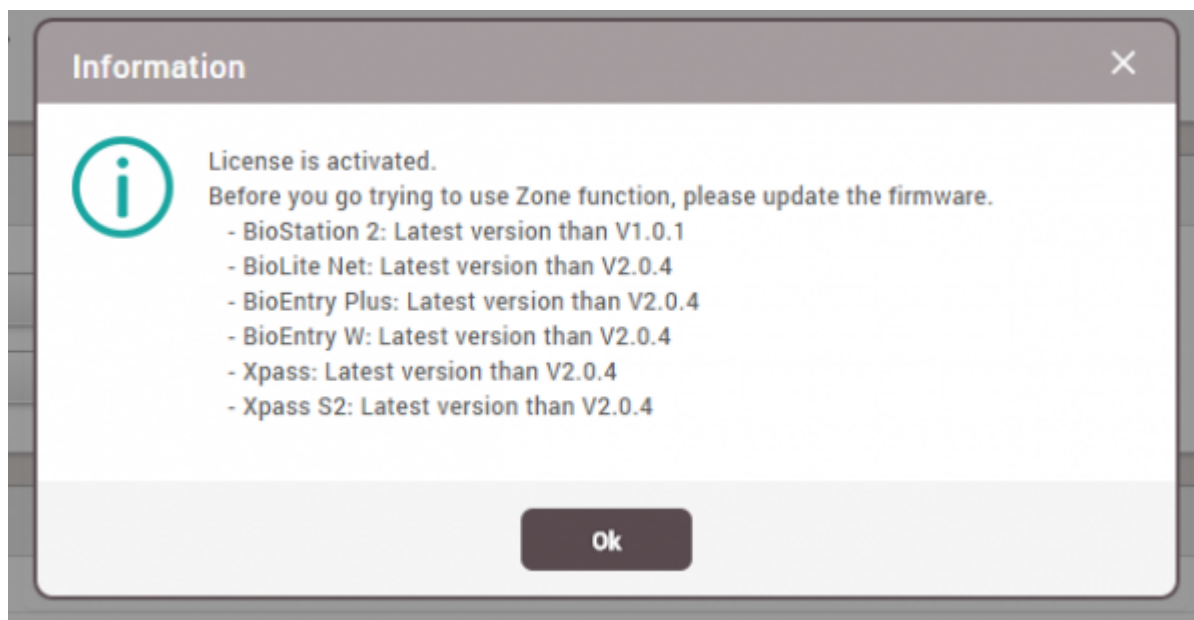


The dialog box is titled "Information" and contains the following information:

License is activated.
Before you go trying to use Zone function, please update the firmware.

- BioStation 2: Latest version than V1.0.1
- BioLite Net: Latest version than V2.0.4
- BioEntry Plus: Latest version than V2.0.4
- BioEntry W: Latest version than V2.0.4
- Xpass: Latest version than V2.0.4
- Xpass S2: Latest version than V2.0.4

At the bottom, there is a dark gray button labeled "Ok".

7. Activated license status can be checked from the Server setting and **About**.

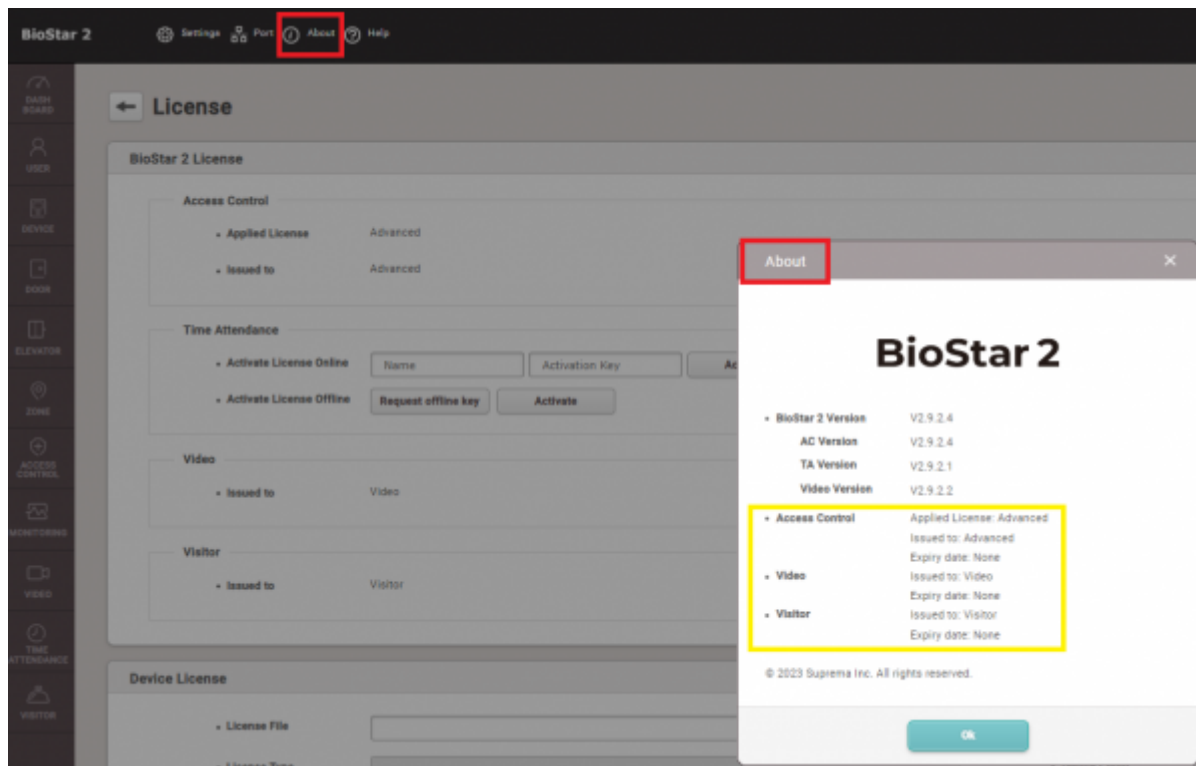


Video Demo for Activating License for Biostar 2 Version 2.9.0 and Above


[how_to_activate_device_license-1.mp4](#)

How to Activate License for Biostar 2 Version 2.8.16 and Lower

1. Go to the global setting and click **SERVER**.

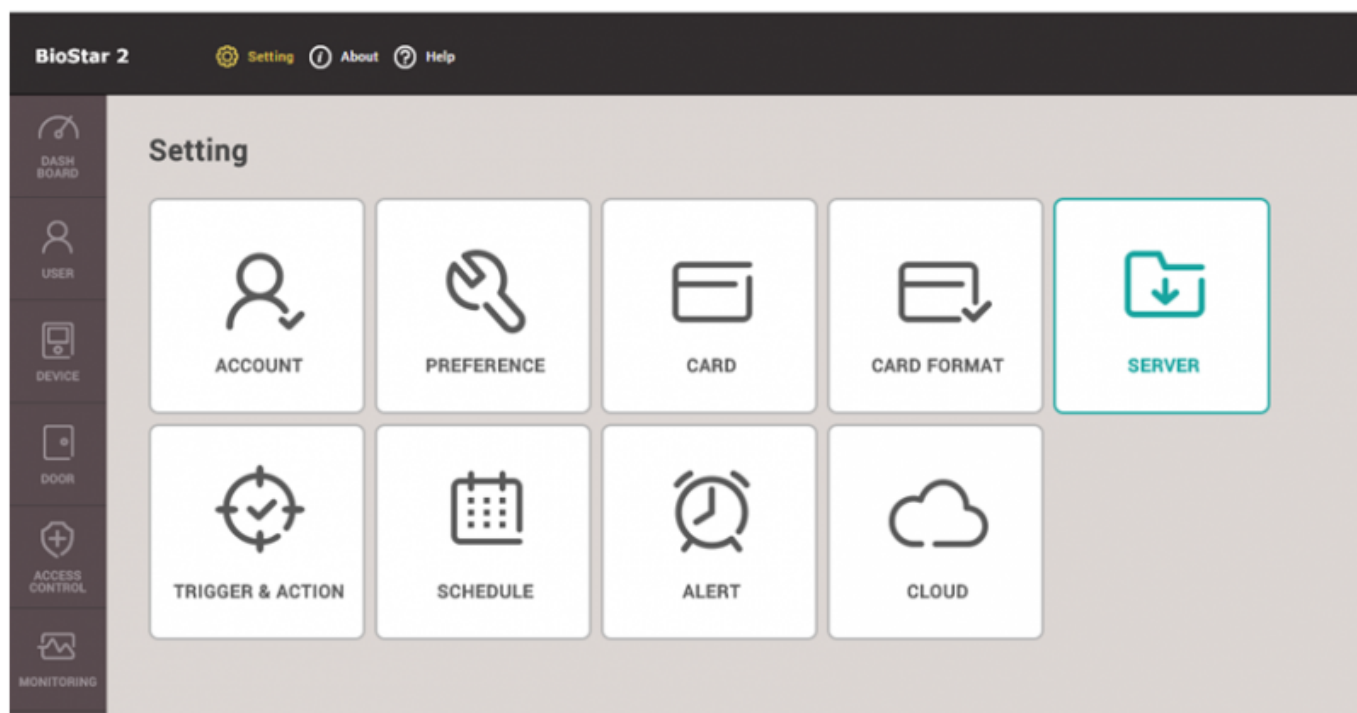


2. Check if the server is connected to the Internet. If connected, you can activate via online.
3. Enter the customer site name and activation key and click **Activate**. You can receive activation key from Suprema or your local distributor.

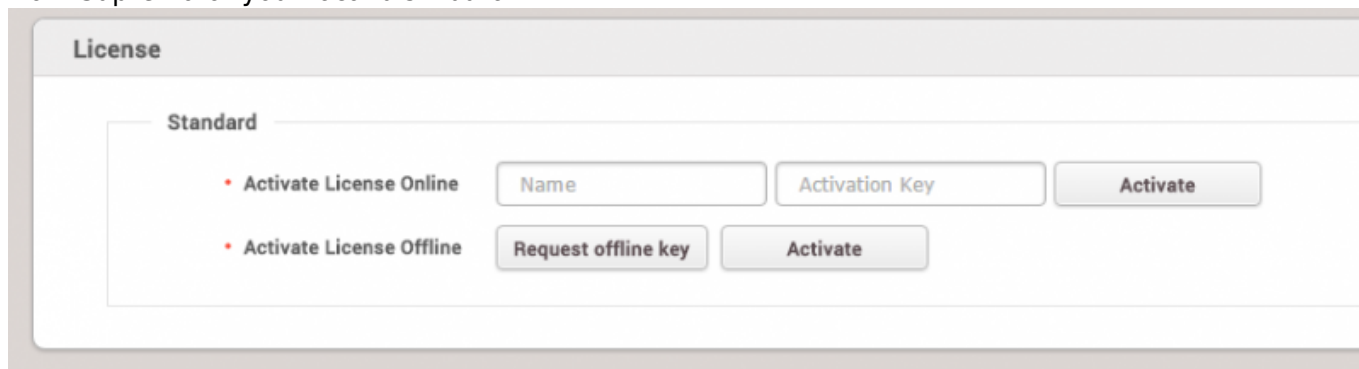

The screenshot shows a 'License' window with a 'Standard' tab. It contains two main sections: 'Activate License Online' and 'Activate License Offline'. The 'Online' section has input fields for 'Name' and 'Activation Key', followed by an 'Activate' button. The 'Offline' section has a 'Request offline key' button and an 'Activate' button.


4. If the server is not connected to the Internet, click **Request offline Key** and download offline key request file.

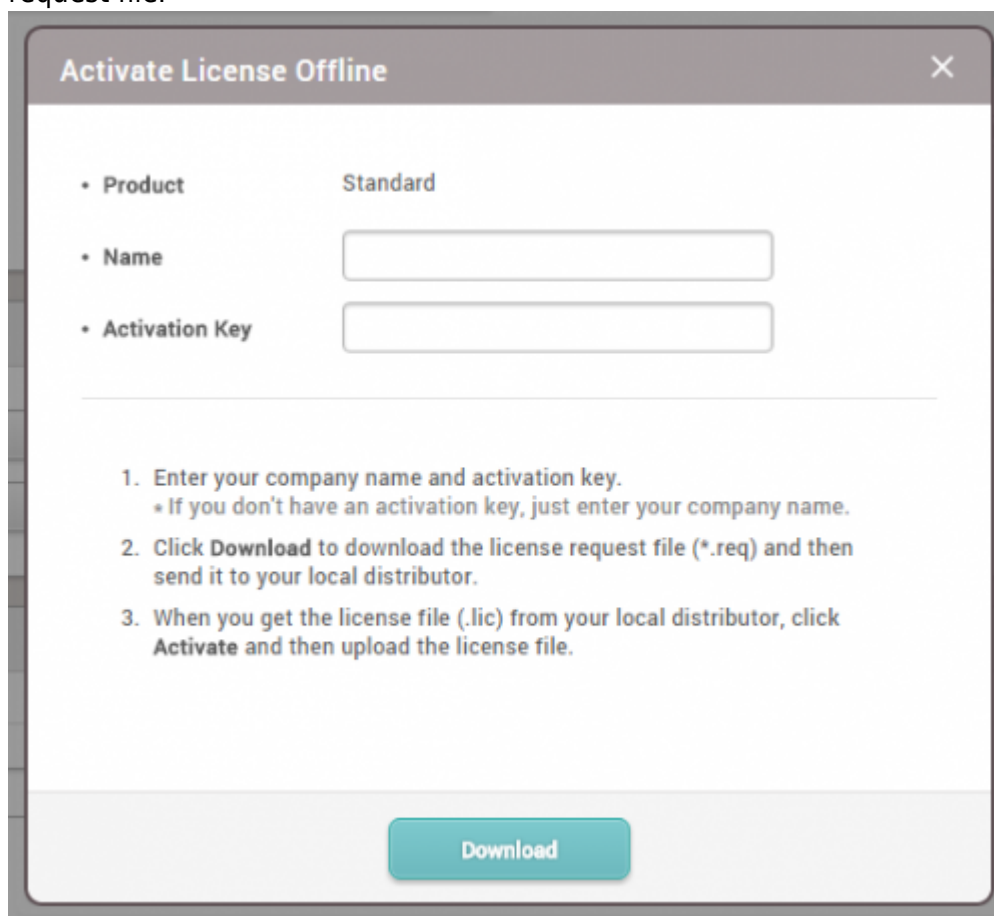


The screenshot shows a 'Activate License Offline' window. It has a 'Product' dropdown set to 'Standard'. Below it are input fields for 'Name' and 'Activation Key'. A 'Download' button is at the bottom. Instructions are listed below the input fields:


1. Enter your company name and activation key.
 - * If you don't have an activation key, just enter your company name.
2. Click **Download** to download the license request file (*.req) and then send it to your local distributor.
3. When you get the license file (.lic) from your local distributor, click **Activate** and then upload the license file.

5. Send the offline key request file to Suprema and receive the offline license key in return.
6. Activate the license and check the information about compatible FW versions to use the updated new features.

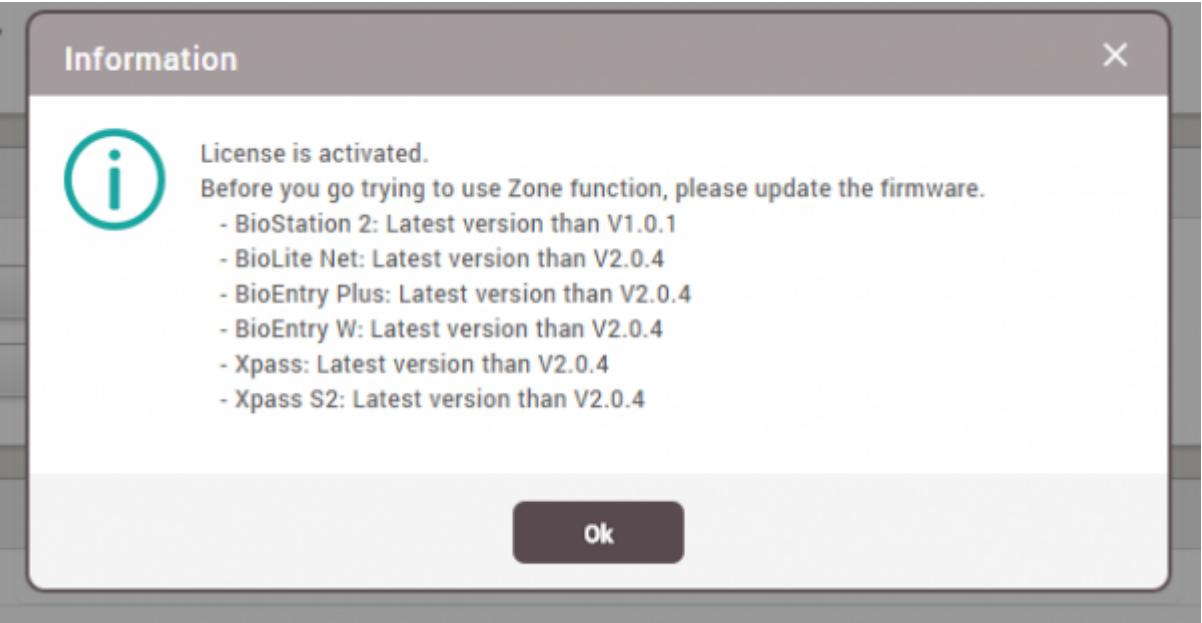

7. Activated license status can be checked from the Server setting and **About**.

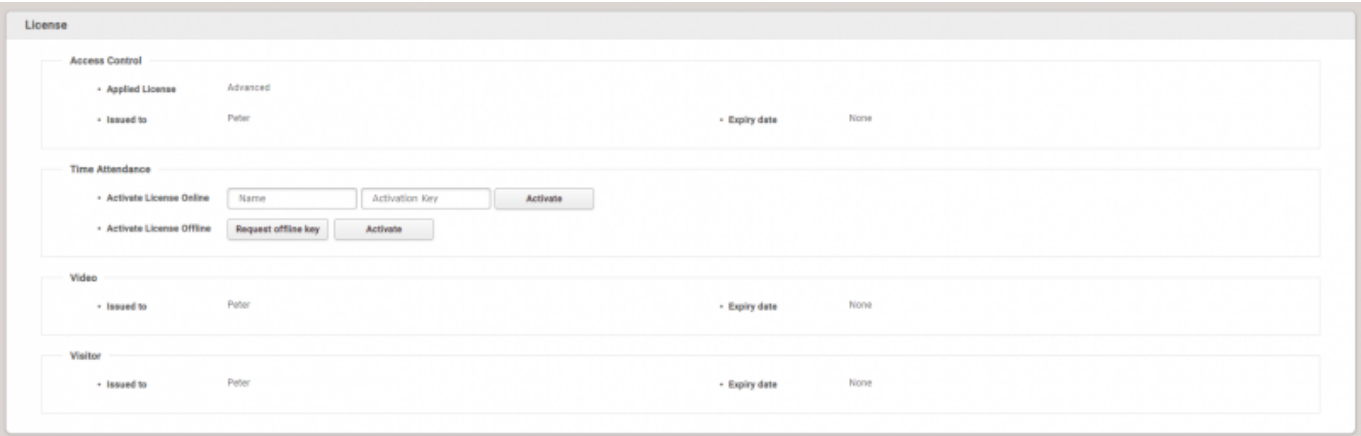

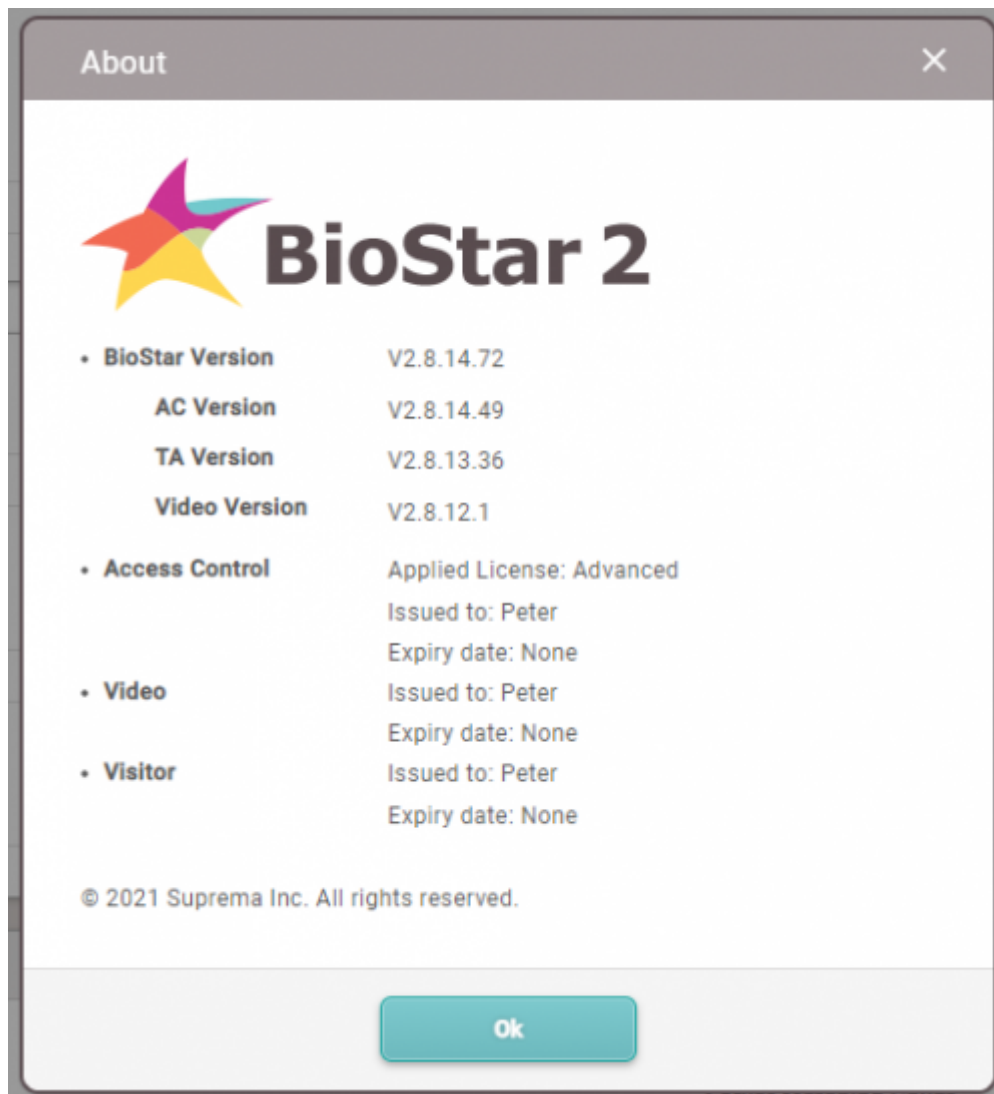

Video Demo for Activating License for Biostar 2 Version 2.8.16 and Lower

[license.mp4](#)

From:

<https://kb.supremainc.com/knowledge/> -

Permanent link:

https://kb.supremainc.com/knowledge/doku.php?id=en:how_to_activate_license

Last update: **2023/04/25 16:03**