# **Table of Contents**

How to configure a Scheduled Lock/Unlock Zone	1
How to configure Scheduled Lock Zone	1
How to configure Scheduled Unlock Zone	2

System Configuration, BioStar 2, Scheduled, Lock/Unlock, Zone

## How to configure a Scheduled Lock/Unlock Zone

As you use an access control system, there are time you need to unlock entrances or doors for guests and employees to pass by. On the other hand, there are times you need to lock the doors so that no one can enter a building or a facility. In BioStar 2, you can use **Scheduled Lock/Unlock Zone** to meet such needs.

To use **Scheduled Lock/Unlock zone**, a BioStar 2 AC Standard License has to be activated. How to activate BioStar 2 license

**Scheduled Lock/Unlock zone** is a feature based on the doors not the devices. To create a door using the device., check the link below. How to add and configure doors

### How to configure Scheduled Lock Zone

O ADD ZONE	Add Zone	×
💡 Anti-passback		_
♀ Fire Alarm	Anti-passback	_
Scheduled Lock	Fire Alarm	
Scheduled Unlock	Scheduled Lock	
	Scheduled Unlock	
	Apply Cancel	

#### 1) Go to **Zone** $\rightarrow$ **Add Zone** $\rightarrow$ Select **Scheduled Lock** $\rightarrow$ **Apply**.

2) Configure the detail settings of the Scheduled Lock Zone.

2022/11/08 21:45	2/4	How to configure a Scheduled Lock/Unlock Zone
Information		
• Name		• Type Scheduled Lock
Configuration		
• Active/Inactive	Active	Door Lock Type Exit Allowed
• Door	<b>•</b>	• Schedule 🔻
Scheduled Lock Bypass		
• Bypass Group	Test Group 💌	

2-1) If **Door Lock Type** is set as Exit Allowed, the users will be able to exit using the exit device of the door. It can be set as Access not allowed.

2-2) Select a predefined schedule or create a schedule for the Scheduled Lock Zone.

2-3) On the Alarm tab, you can select the action that will be done when someone tries to authenticate during the scheduled lock time.

2-4) You can set a Bypass Group which is an access group that is allowed to pass the door even the scheduled lock is activated on the configured time.

### 3) Click the **Apply** button.

2016/06/27 21:00:00	546832586	BioStation 2 5468325	Do or lo cked
2016/06/27 21:00:00	546832586	BioStation 2 5468325	Door lock request by schedule
2016/06/27 21:00:00	546832586	BioStation 2 5468325	Scheduled lock zone started

### How to configure Scheduled Unlock Zone

1) Go to **Zone**  $\rightarrow$  **Add Zone**  $\rightarrow$  Select **Scheduled Unlock**  $\rightarrow$  **Apply**.

	Add Zone ×
♀ Anti-passback	
♀ Fire Alarm	Anti-passback
Scheduled Lock	Second Se
Scheduled Unlock	Scheduled Lock
	Scheduled Unlock
	Apply Cancel

How to configure a Scheduled Lock/Unlock Zone

### 2) Configure the detail settings of the Scheduled Unlock Zone.

3/4

2022/11/08 21:45

Information			
• Name		• Type Scheduled Unlock	
Configuration			
• Active/Inactive • Door	Active	Started by Active Active Schedule	•
Scheduled Unlock Authentication			
Access Group	Not Use 💌		

2-1) The Scheduled Unlock Zone has a feature where you can set it to start by a user authentication. If you set this option as active, a user who belongs to the access group configured to the Scheduled Unlock Authentication has to authenticate during the configured time to start the Scheduled Unlock. This is to prevent the door to be opened when there is nobody in charge at the site.

### 3) Click the **Apply** button.

2016/06/28 09:00:20	546832586	BioStation 2 54	Door unlock request by schedule
2016/06/28 09:00:20	546832586	BioStation 2 54	Do or unlocked
2016/06/28 09:00:20	546832586	BioStation 2 54	Scheduled unlock zone started

### how\_to\_configure\_a\_scheduled\_lock\_unlock\_zone.mp4

#### From:

https://kb.supremainc.com/knowledge/ -

Permanent link:

https://kb.supremainc.com/knowledge/doku.php?id=en:how\_to\_configure\_a\_scheduled\_lock\_unlock\_zone

Last update: 2022/11/01 15:01