

Table of Contents

Intrusion Alarm Zone 1

Intrusion Alarm Zone

A zone set to emit a warning sound or relay signal if an unauthorized person attempts an intrusion after [Arm](#). This zone normally begins monitoring after the day's work, and emits a preset alarm or signal when an intrusion attempt is detected.

From:

<https://kb.supremainc.com/knowledge/> -

Permanent link:

https://kb.supremainc.com/knowledge/doku.php?id=en:intrusion_alarm_zone

Last update: **2019/01/02 15:15**