


.....	1
.....	4

, BioStar 2,


가

1. > 가

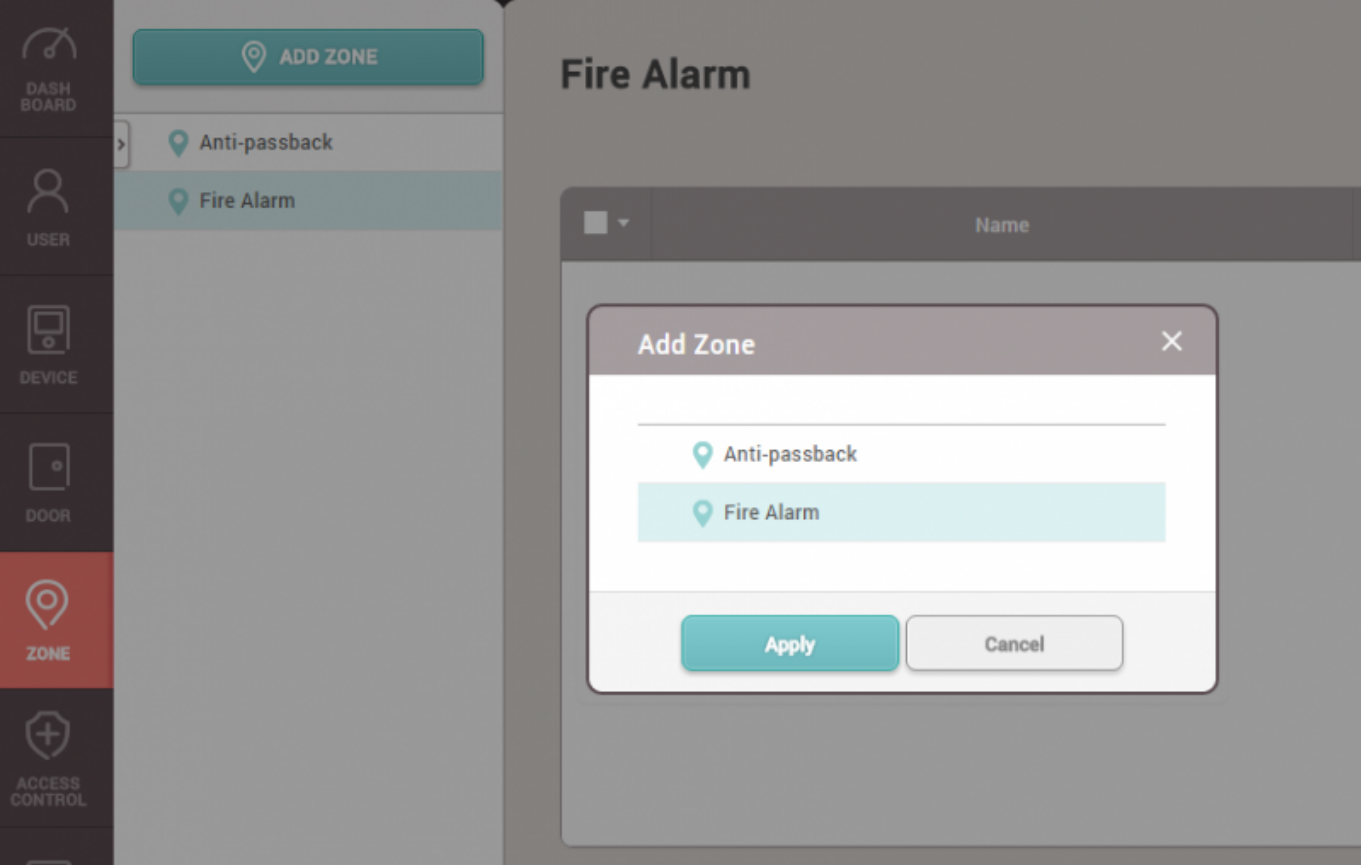


2.

- : RS-485 가 '
 - : TCP/IP RS485 BioStar 2 가 ' '

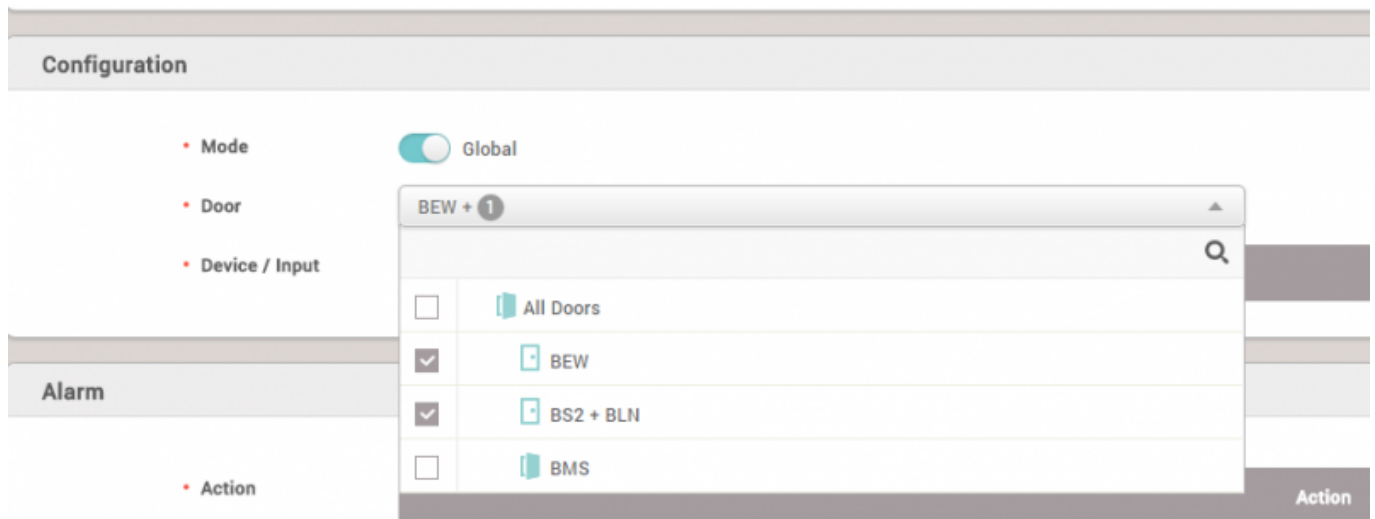


3.

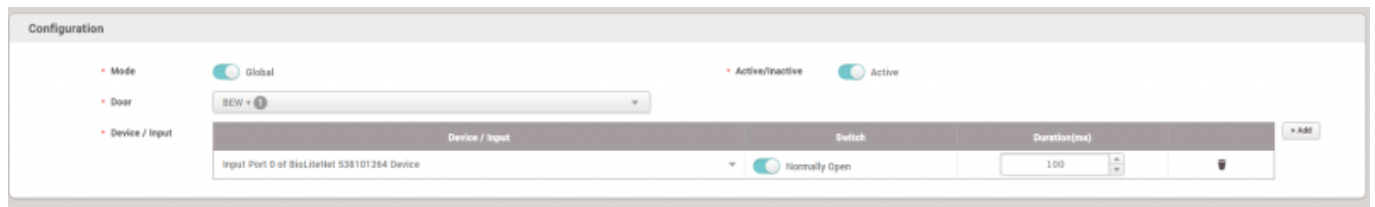


4.

가

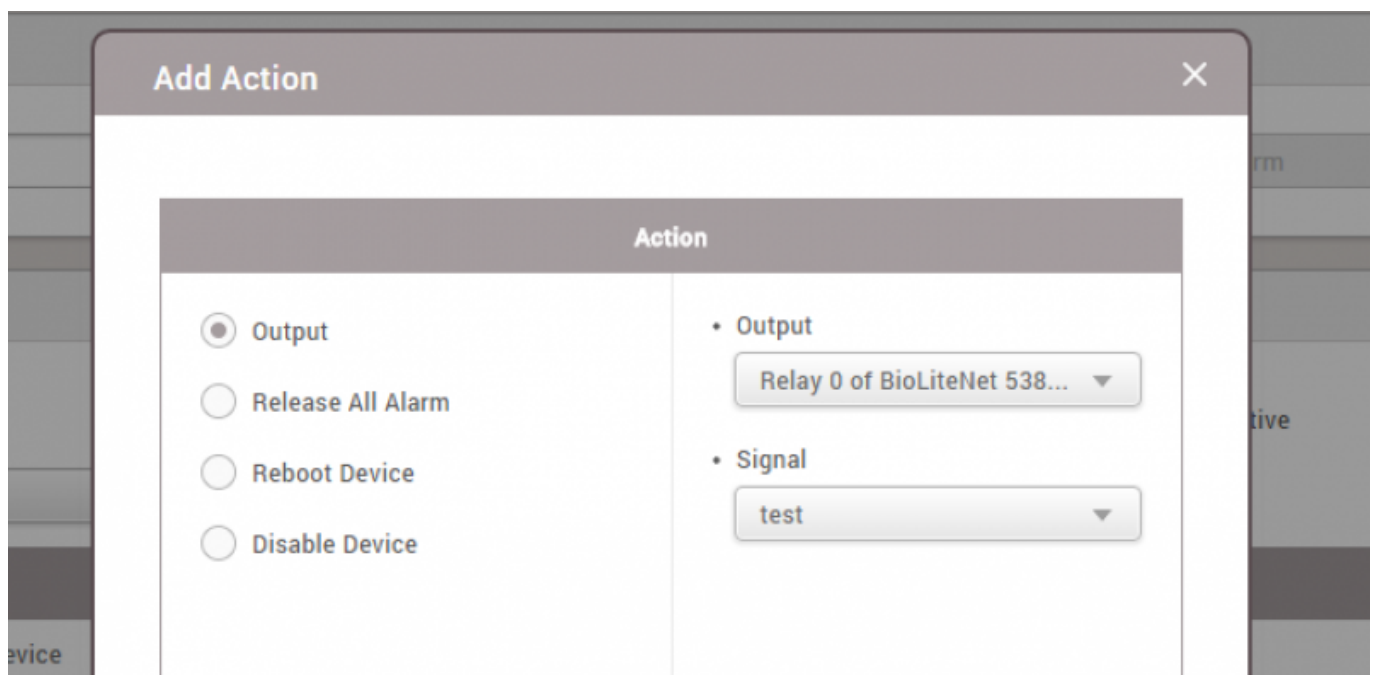


5.

가

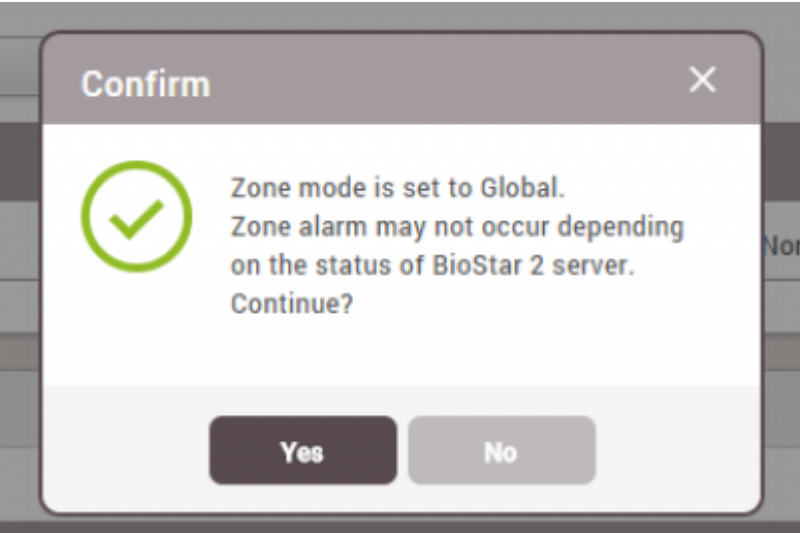

6. >

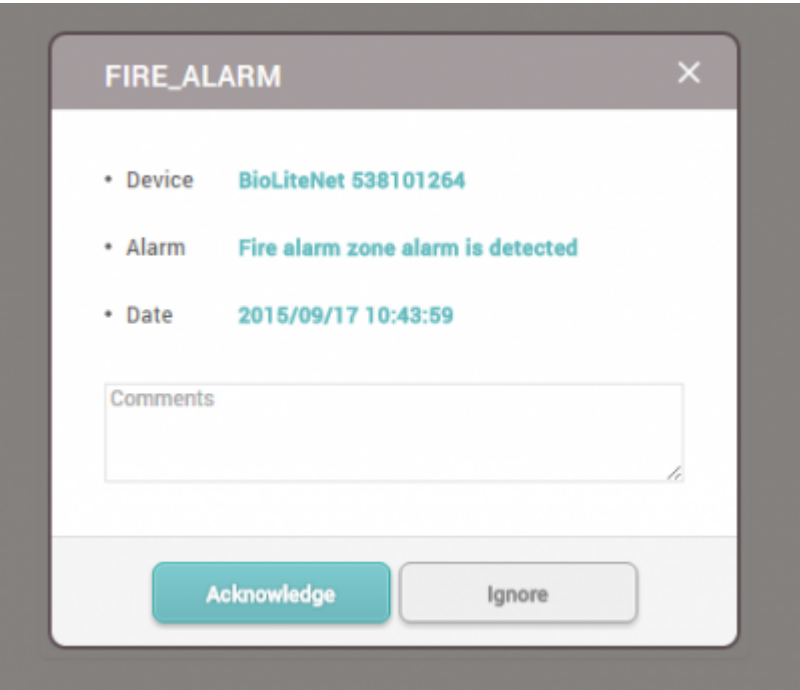

Door Status						
Save Filter						
	Door Name	Door Status	Door Relay	Alarm	Last Event	
☐	BEW	Unlocked			10:43 UNLOCKED	
☐	BS2 + BLN	Unlocked			10:44 UNLOCKED	

7.

Zone Status						
Save Filter					Clear Alarm	...
☒	Type	Zone Name	Active/Inactive	Status	Alarm	Last Event
☒	Fire Alarm	Test	Active	Normal		10:47 FIRE_ALARM_CLEAR

Door Status					
Save Filter					
	Door Name	Door Status	Door Relay	Alarm	Last Event
☐	BEW	Closed	Locked		10:47 LOCKED
☐	BS2 + BLN	Closed	Locked		10:48 LOCKED

fire.mp4

From:

<http://kb.supremainc.com/knowledge/> -

Permanent link:

http://kb.supremainc.com/knowledge/doku.php?id=ko:how_to_configure_firealarm_zone

Last update: **2017/01/10 13:35**