

How to Use a Wireless Door Lock

Connect a wireless door lock to CoreStation and use it as an entry door.

This document explains how to connect and set up a wireless door lock.



Wireless Door Lock is available for CoreStation v1.7.1 or later and BioStar 2 v2.9.4 or later.

Activating a Wireless Door Lock Device License

Enrolling and using the wireless door lock requires a separate device license.

Contact the place of purchase to issue a device license.



- Wireless door lock device licenses can be activated on CoreStation through BioStar 2.
- The device license file is an encrypted file and cannot be modified arbitrarily.
- Device licenses are issued based on the device ID. If the device ID is changed in an unusual way, the warranty service for the license is not provided.
- You can issue a device license for up to 12 devices, equal to the number of wireless door locks you want to connect.
- The maximum number of wireless door locks that can be connected with a device license is 12. Even if you activate multiple device licenses, you cannot exceed 12 devices.

1 Click **Settings** → **LICENSE**.

2 Click **Browse** to load the device license file from the path where the device license is saved.

Device ID	Device Name	Product Name	Device Status	License Status	Activated Count
432073370	CoreStation 40 432073370 (192.168.40.164)	CS-40	Normal	Not Activated	4 / 8
432073371	CoreStation 40 432073371 (192.168.40.164)	CS-40	Normal	Activated	8 / 8
432073372	CoreStation 40 432073372 (192.168.40.164)	CS-40	Disconnected	N/A	-
432073373	-	-	Unregistered	N/A	-

► The image above is an example screen and may differ from the actual screen.

3 After checking the device list, click **Activated** to activate the device license. If the license activation fails, an activation failed message is displayed, and you can try to activate the license again.


Enrolling a Wireless Door Lock with Corestation

Add a wireless door lock to a CoreStation enrolled in BioStar 2.




- Supported OSDP antenna and wireless door lock are as below:
 - U&Z OSDP Antenna: CX8936
 - U&Z Wireless Door Lock: CX217x (Handle), CX212x (Knob)
- To connect the Wireless Door Lock, the wireless antenna module must be connected to the CoreStation. Only two wireless antenna modules can be connected.
- 6 wireless door locks can be connected to one wireless antenna module, and the maximum number of wireless door locks that can be connected to one CoreStation is 12.

- 1 Click **DEVICE**.
- 2 Right-click on the name of a CoreStation and click **Add OSDP Device**.

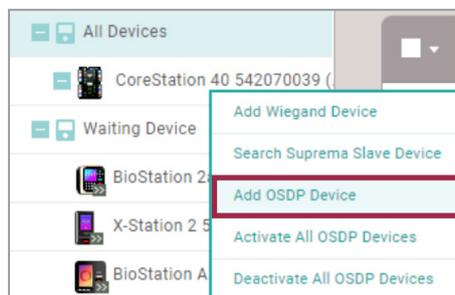


► The image above is an example screen and may differ from the actual screen.

- 3 The **Select OSDP Device Type** window appears. Select **OSDP Antenna** and then click **OK**.

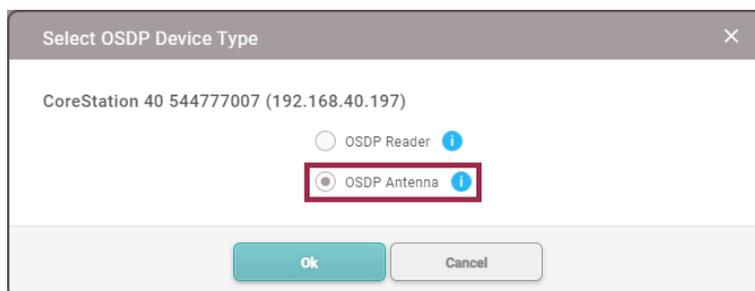


► The image above is an example screen and may differ from the actual screen.

4 A list of ports appears. Among the ports whose **Port Status** is **Available**, select the port to add the OSDP antenna.

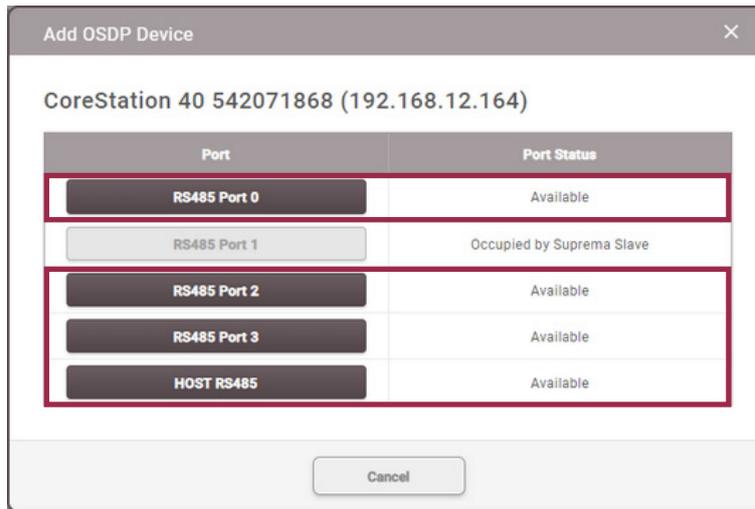

► The image above is an example screen and may differ from the actual screen.

5 Set the **Information**, **Network (RS-485)**, and click **Apply**.

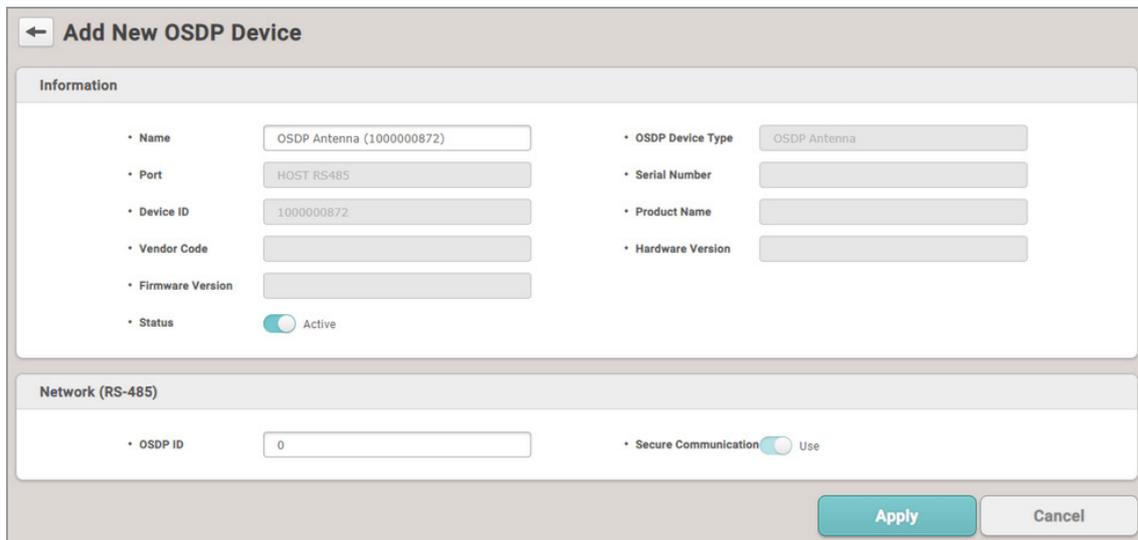


► The image above is an example screen and may differ from the actual screen.



OSDP ID defaults to 0. Enter the **OSDP ID** set on the OSDP antenna.

6 Right-click the added OSDP antenna and click **Auto Add Wireless Door Lock**.

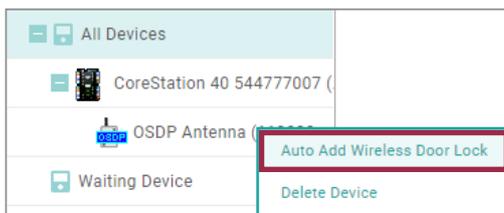

► The image above is an example screen and may differ from the actual screen.


7 Tag the provided SERVICEKEY card on the wireless door lock.

8 The OSDP antenna connects to the wireless door lock. Set the door to a connected wireless door lock and use it.

Setting a Wireless Door Lock

You can set the **Name**, **Status**, and **Authentication** of the enrolled wireless door lock.

- 1 Click **DEVICE**.
- 2 Click a wireless door lock on the device list to edit.

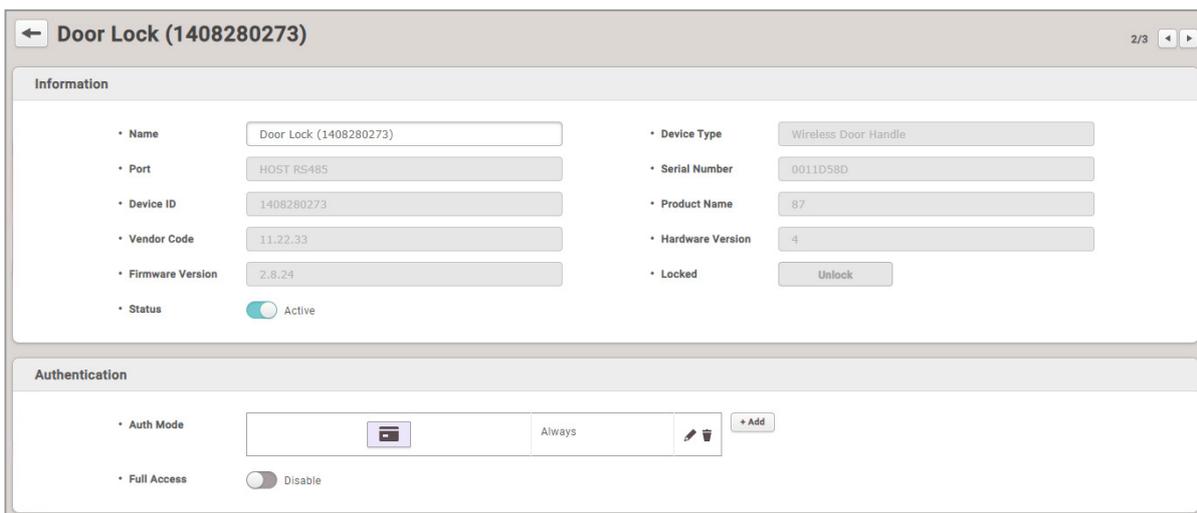

► The image above is an example screen and may differ from the actual screen.

- **Name:** Enter a device name. If not entered, it will be assigned automatically.
- **Status:** Set the device status. If set to **Inactive**, CoreStation will not communicate with the wireless door lock.
- **Auth Mode:** The wireless door lock can only use a CSN card as an authentication mode.



Click **+ Add**, then drag and drop the **Card**. Select a schedule and click **OK** to register the authentication mode. If no desired schedule is available, click **+ Add Schedule** to create one.


- **Full Access:** Full access can be granted to users registered in the CoreStation to which the wireless door lock is connected without setting an access group.

3 Click **Apply** to save the settings.

View a Wireless Door Lock Status

Check the battery status of the wireless door lock in use.

- 1 Click **MONITORING**.
- 2 Click **Wireless Door Lock Status** in the **List View**.

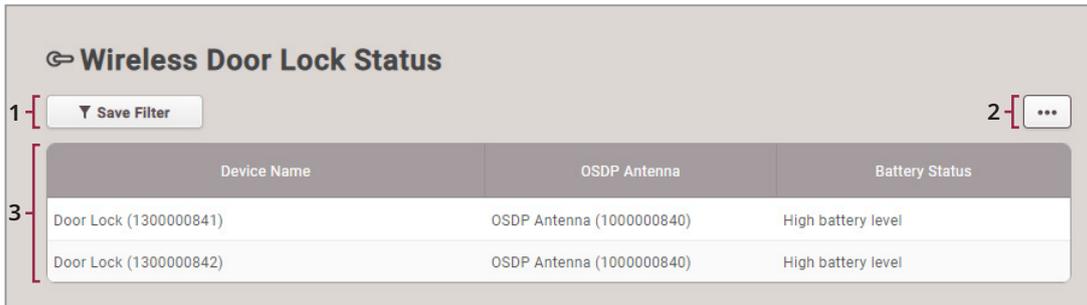

► The image above is an example screen and may differ from the actual screen.

No.	Item	Description
1	Save Filter Button	Saves the set filter.
2	Function Buttons (Column Setting)	Changes the column setting of the log.
3	Status List	<p>Check the battery status of the wireless door lock in use.</p> <ul style="list-style-type: none"> • High battery level: The battery level is sufficient. • Low battery level / Critical battery level: The battery level is low, it is recommended to replace the battery for smooth operation. • Empty battery: The battery level is almost empty. Please replace the battery. <div style="border: 1px solid #ccc; padding: 5px; margin-top: 10px;"> <p> In the Settings → ALERT menu, you can set alarms to occur at Low battery level, Critical battery level, and Empty battery.</p> </div>