

SDK API 1

initialize 1

 1

run 1

 1

getVersion 2

 2

 2

setCardType 2

 2

 2

connectFtpServer 3

 3

 3

disconnectFtpServer 3

 3

getFirmwareFileList 3

 4

 4

upgradeFirmware 4

 4

 4

SDK API

initialize

SDK

```
void initialize(Context context, DeviceListener listener)
```

- context : android application context.
- listener : 가

DeviceListener

가 SDK가 가

run

SDK

```
int run()
```

SUCCESS 가

SDK 가

getVersion

SDK / Firmware 가 .

```
int getVersion(Version version)
```

- version : SDK / Firmware

Version

SUCCESS 가 .

setCardType

RF .

```
int setCardType(int cardType)
```

- cardType : RF

1	HIGH_FREQUENCY
2	HIGH_FREQUENCY_ICLASS
3	LOW_FREQUENCY
4	LOW_FREQUENCY_PROX

SUCCESS 가 .

connectFtpServer

FTP

```
int connectFtpServer(FirmwareOption option)
```

- option:

SUCCESS

가

API FTP

FTP

disconnectFtpServer

FTP

```
int disconnectFtpServer()
```

SUCCESS

가

API FTP

FTP

getFirmwareFileList

FTP

```
int getFirmwareFileList(ArrayList<String> fileList)
```

- fileList:

SUCCESS 가

API FTP

FTP

upgradeFirmware

```
int upgradeFirmware(FirmwareOption option)
```

- option:

SUCCESS 가

API FTP

FTP

From:

<https://kb.supremainc.com/svpsdk/> - **SVP Android SDK**

Permanent link:

https://kb.supremainc.com/svpsdk/doku.php?id=ko:sdk_api&rev=1543821685

Last update: **2018/12/03 16:21**

