

Table of Contents

Local Anti-Passback configuration (No License) 1

RS-485 Mode 1

Door configuration 1

[BioStar 2](#), [RS485](#), [antipassback](#), [localzone](#)

Local Anti-Passback configuration (No License)

This document will guide you how to configure Local Anti-Passback zone which is provided without license.


RS-485 Mode

Local zone means RS-485 based, master device is zone master. Please refer to the below link for RS-485 configuration.

[RS485 Mode \(Master, Default, Slave\)](#)

Door configuration

Go to Device tap, click Add Door and configure the door which you want to set up Anti-Passback zone.

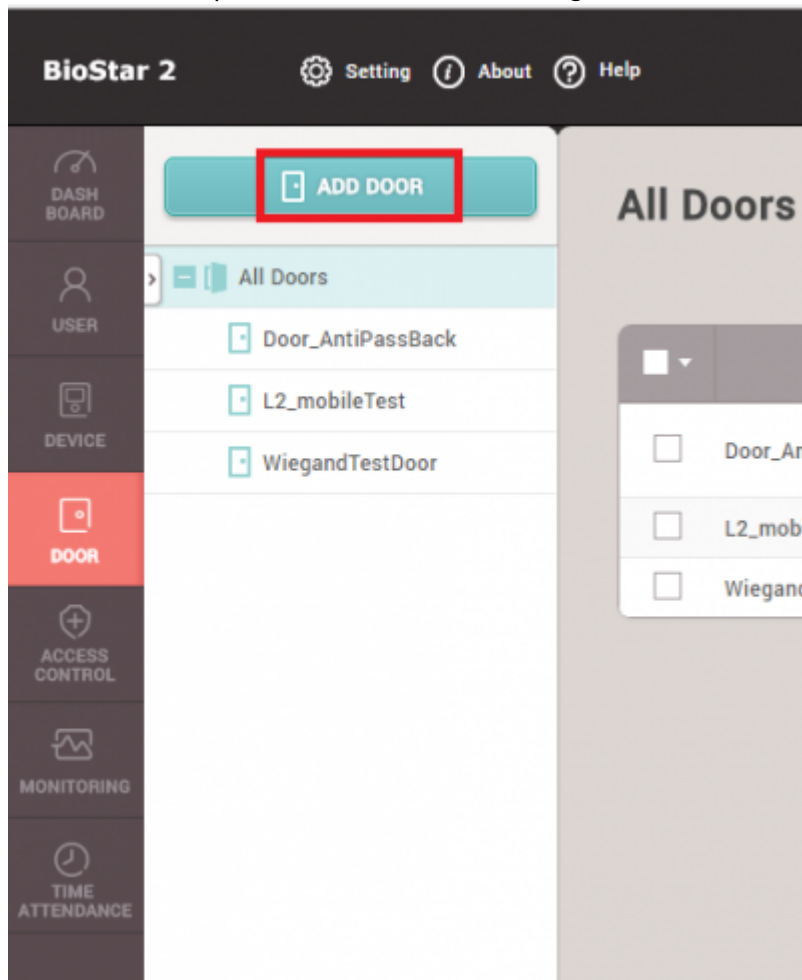

Assign each Entry device and Exit device to the devices you have already added at the above step.
(RS-485 Master and Slave devices)

Door_AntiPassBack

1/3

Information

Name

Door_AntiPassBack

Description

abc

Group

All Doors

Configuration

Entry Device

BioStation 2 546832586 (192.168.14.228)_TEST2

Door Relay(s)

None

Exit Button

BioStation 2 546832586 (192.168.14.228)_TEST2

Door Sensor

BioStation 2 546832593

Exit Device

None

Switch

Normally Open

Door_AntiPassBack

1/3

Information

Name

Door_AntiPassBack

Description

abc

Group

All Doors

Configuration

Entry Device

BioStation 2 546832586 (192.168.14.228)_TEST2

Door Relay(s)

Relay 0 of BioStation 2 546832586 (192.168.14.228)_TEST2 Device

Exit Button

Input Port 0 of BioStation 2 546832586 (192.168.14.228)_TEST2 Device

Door Sensor

None

Exit Device

None

Switch

Normally Open

Once you assigned Entry Device and Exit Device, Anti-Passback and Alarm menu will be added at the bottom.

USER

DEVICE

DOOR

ACCESS CONTROL

MONITORING

TIME ATTENDANCE

Configuration

Entry Device

BioStation 2 546832586 (192.168.14.228)_TEST2

Door Relay(s)

Relay 0 of BioStation 2 546832586 (192.168.14.228)_TEST2 Device

Exit Button

Input Port 0 of BioStation 2 546832586 (192.168.14.228)_TEST2 Device

Door Sensor

None

Exit Device

BioStation 2 546832593

Switch

Normally Open

Option

Open

Open Time

3 sec

Dual Authentication

Device

No device

Anti PassBack

Type

None

Alarm

Anti PassBack

Action

Add

From:
<https://kb.supremainc.com/knowledge/> -

Permanent link:
https://kb.supremainc.com/knowledge/doku.php?id=en:2xfaq_how_to_configure_anti-passback_zone_basic-no_license

Last update: 2017/10/26 15:58