

Table of Contents

How To Issue BioStar 2 QR ..... 1

    How to issue BioStar 2 QR ..... 1

        Step 1: Set Email Setting in BioStar 2 and enable [QR] option to send the QR code to user emails ..... 1

        Step 2: Add X-Station 2 QR device to BioStar 2 ..... 3

        Step 3: Go to USER menu and add QR ..... 3

        Step 4: Check the email box. Download the attached QR in the email content, or print the QR from the downloaded QR ..... 5

# How To Issue BioStar 2 QR

Affect Products & Versions	
Device	X-Station 2 v1.0.1_20210329 or above
BioStar 2	BioStar v2.8.11 or above

From BioStar 2.8.11, QR/Bardcode is available to use as BioStar 2 User credential.  
X-Station 2 QR models(XS2-QDPB and XS2-QAPB) can read the QR or Barcode and authenticate the user information. By sending an email to users, the users can download QR code on mobile or PC.  
A user can have BioStar 2 QR code or third-party QR code/barcode data as a user credential.

- This document is for how to issue BioStar 2 QR.
- BioStar 2 QR is only available to use with X-Station 2 QR products.

For more details about X-Station 2, please visit [\[BioStar 2\] New Product Introduction: X-Station 2](#).

## How to issue BioStar 2 QR

You can generate QR code in BioStar 2 system and use it as a user credential as follows.

- Step 1: Set Email Setting in BioStar 2 and enable [QR] option to send the QR code to user emails
- Step 2: Add X-Station 2 QR device to BioStar 2
- Step 3: Go to USER menu and add a new user, update BioStar 2QR with user email
- Step 4: Confirm the email, download the attached QR in the email, or print out the QR

### Step 1: Set Email Setting in BioStar 2 and enable [QR] option to send the QR code to user emails

Direction: Settings>EMAIL SETTING>Email Contents Setting

- Unordered List ItemEmail Contents Setting is for Visual Face Enrollment and QR Enrollment only.

Click [SMTP Setting].

## Email Contents Setting

- SMTP Setting

**SMTP setting**

- Test Mail Recipient Address

connect@suprema....

 **Send Email**

Refer to the SMTP Setting using in the company and update the information correctly.

- Please check Security Type and update the port in accordance with the security type.
- User name and Password must be matched.

### SMTP Option



#### Sender Information

- **SMTP Server Name**
- **Description**
- **Server Address**
- **Port(default:25)**
- **User Name**
- **Password**
- **Security Type**
- **Sender**

**Apply****Cancel**

Enable the QR option as follows. and fill in the other contents.

QR

- QR ☒ Use
- Email Title [Suprema] Your QR code has been generated
- Company Name Suprema Inc.
- Company Logo
- Contact HR Team

## Step 2: Add X-Station 2 QR device to BioStar 2

XS2-QDPB and XS2-QAPB are available to scan QR or Barcode. Please check the product name and add the device to BioStar 2.8.11 or above.

BioStar 2

Settings

Port

About

Help

DASH BOARD

USER

DEVICE

DOOR

SEARCH DEVICE

ADVANCED SEARCH

All Devices

BioLite N2 538747164 (192.168.13.141)

FaceStation 2 270 (192.168.13.144)

FaceStation F2 547836017 (192.168.13.110)

X-Station 2 547837141 (192.168.13.179)

## Step 3: Go to USER menu and add QR

To generate the BioStar 2 QR code, go to USER. Add a new user and add the Email.

←

Add New User

Information

+ Add Photo

• Name

Helen

• Department

• ID

335

• Group

All Users

• Period

2001/01/01

00:00

~

2030/12/31

23:59

• Operator Level

None

• Email

helenjang@suprema.co.kr

• Title

• Telephone

• Status

Active

• Access Group

Click [QR/Barcode] in Credential.

Credential

☐ PIN

• Auth Mode

Device Default

• Credential

+ Fingerprint

+ Face

+ Visual Face

+ Card

+ Mobile

+ QR/Barcode

Select BioStar 2 QR and click [Enroll].

- Unordered List ItemYou can select Input Type as random card ID or manual ID input.

Enroll Card

• QR/Barcode Type

BioStar 2 QR

Information

• Card ID

162346636437750645

Use User ID

• Input Type

Use random card ID

\* BioStar 2 QR includes a PIN which is encrypted.


Enroll

Cancel

Click [Apply] to save the user data.

- At this time, the user receives the email from BioStar 2 and BioStar 2 synchronizes the user data to the connected devices.

Check the success message.

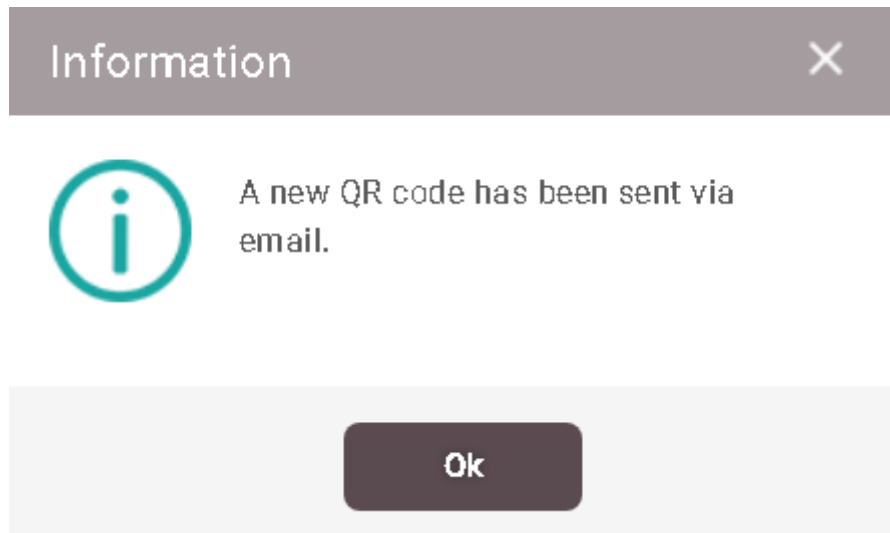


**Step 4: Check the email box. Download the attached QR in the email content, or print the QR from the downloaded QR**

Users can confirm the email on a mobile or a PC.

The attached QR image file or, use the QR in the email content are available to use.

[Suprema] Your QR code has been generated

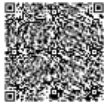

# Suprema

## Here is your QR Code

Dear @suprema.co.kr,

You have been approved to access the site of Suprema Inc. using a QR code. Please download the QR code and scan on the device as guided below.



Scan QR Code



Please align the QR code to the guide beam at a 5~20cm distance from the sensor

Please inform us of any problems regarding the QR code.  
Contact: HR Team

For BioStar 2 QR, the device Operation mode is same as Card Authentication mode.

If the user does not have the QR email, you can click [Resend] to send the email again.

• 1:1 Security Level

Device Default

Type	Card Data Format	Summary	
BioStar 2 QR	BioStar 2 QR	ID: 16236251 (Issue Count: 1)	<div><div>Resend</div><div>Block</div><div></div></div>

From:

<https://kb.supremainc.com/knowledge/> -

Permanent link:

[https://kb.supremainc.com/knowledge/doku.php?id=en:how\\_to\\_issue\\_biostar\\_2\\_qr&rev=1627088090](https://kb.supremainc.com/knowledge/doku.php?id=en:how_to_issue_biostar_2_qr&rev=1627088090)

Last update:

2021/07/24 09:54