

Table of Contents

How to issue smart cards	1
Configure a smart card format	1
Applying the configured smart card format to the devices	3
Formatting a card	3
Issuing a smart card	5

How to issue smart cards


The BioStar 2 system is designed to authenticate users matching the template stored inside the device with the scanned fingerprint template. However, there are needs for securing personal information including fingerprint templates. In BioStar 2, the administrator can use a concept called smart card which will allow to issue cards to store users' fingerprint templates inside a card and carry it for the authentication. This will lead to a more secure environment since the devices doesn't have to store the user information inside the device.

To issue a smart card, such as Access on Card and Secure Credential card, you will have to configure the smart card format first, and apply it to the device.

Access on Card doesn't need any user information transferred to the device. Secure Credential Card needs basic user information stored inside the device. Secure Credential Card is used when only to store the fingerprint template inside the card.

Configure a smart card format

1) Go to **Setting** → **Card Format** → **Add Smart Card**.

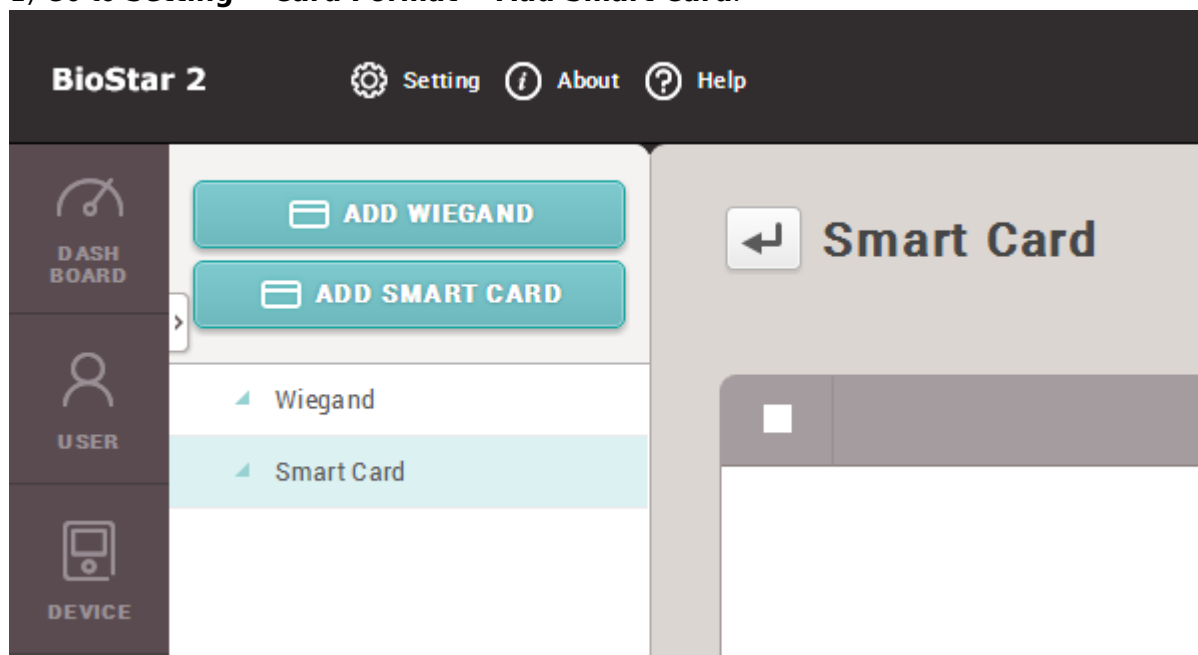

2) Enter the name of the smart card format. There are 3 types of cards supported for the AoC card and the SC card, Mifare, iClass, and DESFire. Select the card that will be used for the smart card.

Add New Smart Card

Information

• Name • Secondary Key Inactive

MIFARE | iCLASS | DESFire

• Primary Key

• Secondary Key

• Start Block Index

Layout

• Template Count • Template Size

DESFire cards are only supported if the encryption type is DES/3DES.

3) You can select to use up to 2 site keys for the card. To use the Secondary Key, you will have to activate it first. Check the checkbox if you need to use the key.

Information

• Name • Secondary Key Active

MIFARE | iCLASS | DESFire

• Primary Key

• Secondary Key

• Start Block Index

4) You can configure how many templates you want to store inside the card and which block to start on storing the information. You can also configure the template size, if you don't have enough space on the card to fit the template.

The screenshot shows two configuration panels. The top panel has a field for 'Start Block Index' with a value of 8 and a small up/down arrow icon. The bottom panel is titled 'Layout' and contains two fields: 'Template Count' with a value of 2, and 'Template Size' with a value of 300. Both fields have up/down arrow icons.

Applying the configured smart card format to the devices

To make the device read the smart cards, you will have to set the device to have the smart card format.

- 1) Go to **Device** → **Select the device** → **Authentication Tab** → **Card ID Format**.
- 2) You will find the smart card format layout menu. Select the layout that you want to apply.

The screenshot shows the 'Card ID Format' configuration menu. It has two settings: 'Format Type' with a toggle switch currently turned off and the text 'Normal' next to it; and 'Layout' with a dropdown menu currently showing 'None'. Below this menu is a grey bar with the word 'Advanced' in white text.

Formatting a card

The card needs to be formatted before being used as a smart card. The card information stored in the blocks will be deleted.

- 1) Go to **User** → **Select a user** → **+ Card**.

Credential

- PIN
- Auth Mode Device Default
- Credential
- 1:1 Security Level Device Default

2) Select **Read Card** from the **Card Type** menu.

Enroll Card

- Card Type
- Device
- Card Layout Format
- Smart Card Type

Information

- Card ID
- Access Group
- Fingerprint
 - 1st Finger Duress
 - 2st Finger Duress
- PIN
- Period

3) Select the device to format the card.

4) Click **Format Card** and place the card on the device. If the format is successful done, you will hear a sound from the device.

Issuing a smart card

1) From the same screen, please change the **Card Type** to **Enroll Smart Card**.

Enroll Card✕

• **Card Type**

• **Card Layout Format**

• **Device**

• **Smart Card Type**


Information

• **Card ID**

• **PIN**

• **Fingerprint**

1st Finger

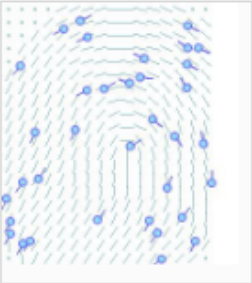

Duress

2) Select the device to enroll the smart card.

3) Select the smart card type. Access on Card and Secure Credential Card is supported.

3-1) The Access on Card will use the user ID same for the secure ID.

3-2) The Secure Credential Card's secure ID can be modified.

4) Select the fingerprint template to be written on the card. For example, click the **1st** button to select the 1st template to be written on the card. The template will get highlighted. A fingerprint must be added first to use the template.

Enroll Card✕

• **Card Type**

• **Card Layout Format**

• **Device**

• **Smart Card Type**

Information


• **Card ID**

• **PIN**

• **Fingerprint**

1st

1st Finger

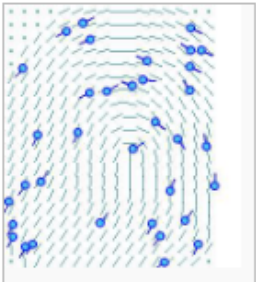

Duress

Write Smart Card

Cancel

5) Click the **Write Smart Card** button.

From:
<http://kb.supremainc.com/knowledge/> -

Permanent link:
http://kb.supremainc.com/knowledge/doku.php?id=en:how_to_issue_a_smart_card&rev=1467952351

Last update: **2016/07/08 13:32**