

# Table of Contents

- How To Configure an Occupancy Limit Zone ..... 1
- How to Configure Occupancy Limit Zone ..... 1
- Step 1: Go [Zone] and click [Add Zone] ..... 1
- Step 2: Choose [Occupancy Limit] to create a new zone ..... 1
- Step 3: Enter a name for the Zone and select devices to configure the Zone ..... 2
- Step 4: Enter the number of people that can enter this zone at one time in Limit ..... 3
- Step 5: If there are users who should be able to access this zone regardless of the rules, set  
            Bypass Group ..... 4
- Video Demonstration ..... 5

# How To Configure an Occupancy Limit Zone

Affect Products & Versions	
<b>Device</b>	FaceStation 2 v1.5.0 or later FaceStation F2 v1.1.0 or later
<b>BioStar 2</b>	BioStar v2.8.11 or later

The Occupancy Limit Zone enables an administrator to manage and control the population density of a place to prevent overcrowding and monitor the zone status. You can use this feature to manage the indoor space to avoid overcrowding for COVID-19 policies. Suprema's Occupancy Limit Zone allows only a limited number of people to enter based on the authentication record from the entry/exit device and restricts entry beyond that, enabling monitoring of the occupants in the zone.


- BioStar 2 AC license is required to use the Occupancy Limit Zone feature.
- For further license information, please visit [\[BioStar 2\] Server License Specification](#).

## How to Configure Occupancy Limit Zone

You can set the Occupancy Limit Zone following the steps below.


**Step 1: Go [Zone] and click [Add Zone]**

**Step 2: Choose [Occupancy Limit] to create a new zone**

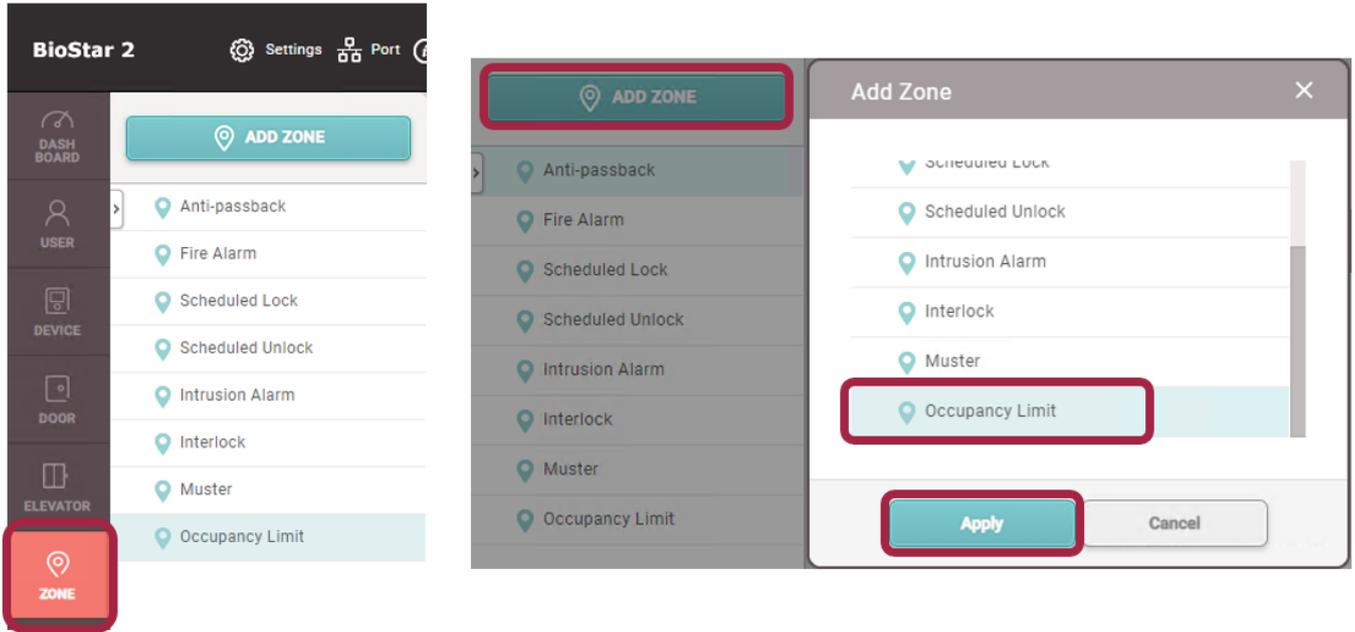

### Step 3: Enter a name for the Zone and select devices to configure the Zone

Please note that Occupancy Limit Zone only supports FaceStation 2 and FaceStation F2.

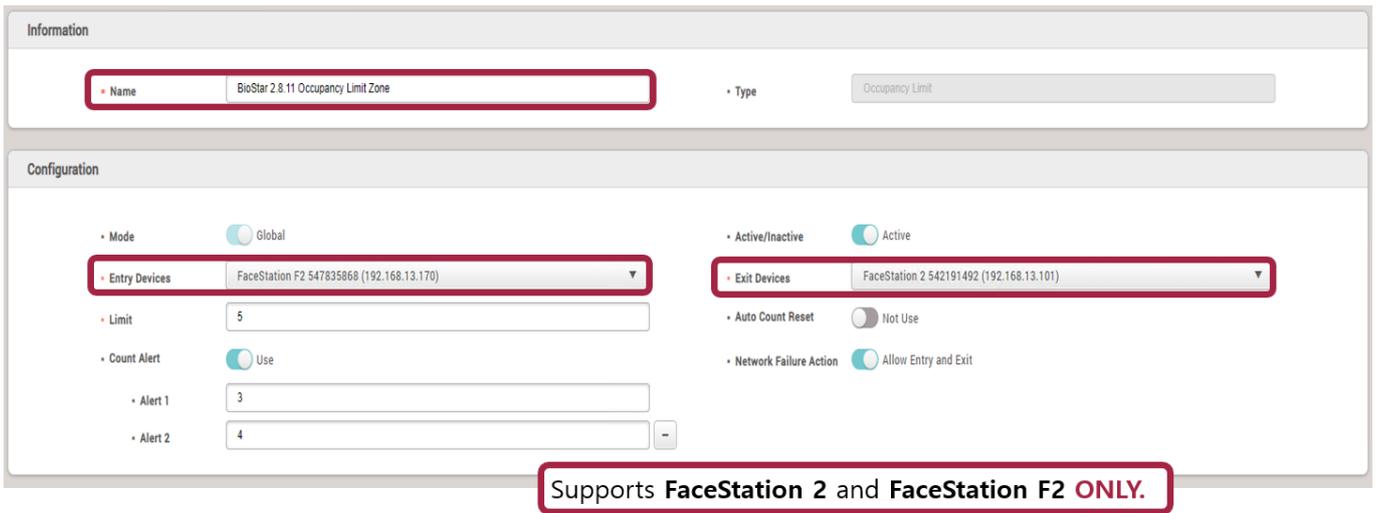

Occupancy Limit Zone only supports Global mode.

Information

Name: BioStar 2.8.11 Occupancy Limit Zone

Type: Occupancy Limit

Configuration

Mode:  Global

Active/Inactive:  Active

Entry Devices: FaceStation F2 547835868 (192.168.13.170)

Exit Devices: FaceStation 2 542191492 (192.168.13.101)

Limit: 5

Auto Count Reset:  Not Use

Count Alert:  Use

Network Failure Action:  Allow Entry and Exit

Alert 1: 3

Alert 2: 4

Count Bypass

Bypass Group: Bypass Access Group

Apply Cancel

### Step 4: Enter the number of people that can enter this zone at one time in Limit

You can enter numbers from 0 to 10,000.  
Limit 0: people can enter the zone without a limit.

Information

Name: BioStar 2.8.11 Occupancy Limit Zone

Configuration

Mode:  Global

Entry Devices: FaceStation F2 547835868 (192.168.13.170)

Limit: 5

Count Alert:  Use

Alert 1: 3

Alert 2: 4

You can enter numbers from 0 to 10,000.  
• **Limit 0:** people can enter the zone **without a limit**

Count Alert: Set an alert to an administrator or set to save event logs before Count reaches the occupancy limit.

- You can set up two alerts and should enter numbers smaller than the Limit value. The values of the alerts must be different.

**Configuration**

- Mode  Global
- Entry Devices FaceStation F2 547835868 (192.168.13.170)
- Limit 5
- Count Alert  Use
  - Alert 1 3
  - Alert 2 5

Auto Count Reset: Set the time to automatically initialize Count. The Count will be initialized at the time you set every day.

• Active/Inactive  Active

• Exit Devices FaceStation 2 542191492 (192.168.13.101)

• Auto Count Reset  Not Use

• Network Failure Action  Allow Entry and Exit

• Auto Count Reset  Use 00 : 00  
\* This follows the time zone set in BioStar 2.

Network Failure Action: Set whether to allow users to enter or leave when a network error occurs in the device set in the zone. If you set it to Allow Entry and Exit, it stops entry restrictions when the device loses network connection, so people can enter the zone even if Count in the zone exceeds the occupancy limit.

• Active/Inactive  Active

• Exit Devices FaceStation 2 542191492 (192.168.13.101)

• Auto Count Reset  Not Use

• Network Failure Action  Allow Entry and Exit

• Network Failure Action  Only Exit Allowed

**Step 5: If there are users who should be able to access this zone regardless of the rules, set Bypass Group**

**Count Bypass**

• Bypass Group Bypass Access Group

## Video Demonstration



Video

From:

<http://kb.supremainc.com/knowledge/> -

Permanent link:

[http://kb.supremainc.com/knowledge/doku.php?id=en:how\\_to\\_configure\\_an\\_occupancy\\_limit\\_zone](http://kb.supremainc.com/knowledge/doku.php?id=en:how_to_configure_an_occupancy_limit_zone)

Last update: **2021/12/20 10:36**